

**Sommario**

List of System Functions ..... 3



## List of System Functions

All the system functions are listed below.

Controllers without display do not require the system password, so the "PWD" column is empty.

### System Functions

| n. | Led ON   | System Function                       | PWD | Description   |
|----|--|---------------------------------------|-----|---|
| 1  |  L1   | 01 - Reset Error Checksum             | -   | Reset errore checksum.<br>N.B.: if the checksum error is present, the led  L1 flashes. |
| 2  |  L2   | 02 - Copy all files MMC/SD → NAND     | -   | <b>Not used for this hardware</b>   |
| 3  |  L1<br> L2   | 03 - Copy all files NAND → MMC/SD     | -   | <b>Not used for this hardware</b>   |
| 4  |  L3   | 04 - Application delete               | -   | Dele the application.   |
| 5  |  L1<br> L3   | 05 - Application upload from MMC/SD   | -   | Upload the application from MMC/SD.   |
| 6  |  L2<br> L3   | 06 - Set Date & Time                  | -   | <b>Not used for this hardware</b>   |
| 7  |  L1<br> L2<br> L3       | 07 - Downl. retentive data to MMC/SD  | -   | Save the retentive data on MMC/SD.  |
| 8  |  L4  | 08 - Set NEW Password                 | -   | <b>Not used for this hardware</b>   |
| 9  |  L1<br> L4   | 09 - Remove all files from NAND Flash | -   | <b>Not used for this hardware</b>   |
| 10 |  L2<br> L4   | 10 - Show NAND Flash files            | -   | <b>Non implementata per questo hardware</b>   |
| 11 |  L1<br> L2<br> L4 | 11 - Touch Calibration                | -   | <b>Not used for this hardware</b>   |
| 12 |  L3<br> L4   | 12 - Set Ethernet communic. parameter | -   | Run the setup procedure for the Ethernet communication parameters (IP address,..., etc.)  |
| 13 |  L1<br> L3<br> L4 | 13 - Backup to NAND                   | -   | Run the backup of the QCL application, data and HMI application on NAND memory.   |
| 14 |  L2<br> L3<br> L4 | 14 - Restore from NAND                | -   | Run the restore of the QCL application, data and HMI application from NAND memory.  |

NB: To exit system functions press the keep the **F1** key or **FUNC** button for at least two seconds.

Documento generato automaticamente da **Qem Wiki** - <https://wiki.qem.it/>

Il contenuto wiki è costantemente aggiornato dal team di sviluppo, è quindi possibile che la versione online contenga informazioni più recenti di questo documento.