

Sommario

List of System Functions 3

List of System Functions

All the system functions are listed below.

Controllers without display do not require the system password, so the “**PWD**” column is empty.

System Functions

n.	Led ON	System Function	PWD	Description
1	 L1	01 - Reset Error Checksum	-	Reset error checksum. N.B.: if the checksum error is present, the led  L1 flashes.
2	 L2	02 - Copy all files MMC/SD → NAND	-	Not used for this hardware
3	  L2	03 - Copy all files NAND → MMC/SD	-	Not used for this hardware
4	 L3	04 - Application delete	-	Dele the application.
5	  L3	05 - Application upload from MMC/SD	-	Upload the application from MMC/SD.
6	  L3	06 - Set Date & Time	-	Not used for this hardware
7	  L2  L3	07 - Downl. retentive data to MMC/SD	-	Save the retentive data on MMC/SD.
8	 L4	08 - Set NEW Password	-	Not used for this hardware
9	  L4	09 - Remove all files from NAND Flash	-	Not used for this hardware
10	  L4	10 - Show NAND Flash files	-	Non implementata per questo hardware
11	  L2  L4	11 - Touch Calibration	-	Not used for this hardware
12	  L4	12 - Set Ethernet communic. parameter	-	Run the setup procedure for the Ethernet communication parameters (IP address,..., etc.)
13	  L3  L4	13 - Backup to NAND	-	Run the backup of the QCL application, data and HMI application on NAND memory.
14	  L3  L4	14 - Restore from NAND	-	Run the restore of the QCL application, data and HMI application from NAND memory.

NB: To exit system functions press the keep the **F1** key or **FUNC** button for at least two seconds.

Documento generato automaticamente da **Qem Wiki** - <https://wiki.qem.it/>

Il contenuto wiki è costantemente aggiornato dal team di sviluppo, è quindi possibile che la versione online contenga informazioni più recenti di questo documento.