

Sommario

Below are list of the all system functions.

The products without the display do not require the system password introduction, therefore the column “**PWD**” is empty.

System functions

n.	Led ON	System function	PWD	Description
1	 L1	01 - Reset Error Checksum	-	Reset checksum error. N.B.: if there is this error, the  L1 led flashing.
2	 L2	02 - Copy all files DEVICE → NAND	-	Copy all files from the selected DEVICE to the NAND Flash
3	  L2	03 - Copy all files NAND → DEVICE	-	Copy all files from the NAND Flash to the selected DEVICE
4	 L3	04 - Application delete	-	Erase l'applicazione.
5	  L3	05 - Application upload from DEVICE	-	Upload the application from the selected DEVICE.
6	  L3	06 - Set Date & Time	-	Not active for this hardware
7	  L2  L3	07 - Downl. retentive data to DEVICE	-	Save the retentive data on the selected DEVICE.
8	 L4	08 - Set NEW Password	-	Not active for this hardware
9	  L4	09 - Remove all files from NAND Flash	-	Erase all files on the NAND Flash.
10	  L4	10 - Show NAND Flash files	-	Not active for this hardware
11	  L2  L4	11 - Touch Calibration	-	Not active for this hardware
12	  L4	12 - Set Ethernet communic. parameter	-	Not active for this hardware
13	  L3  L4	13 - Backup to NAND	-	QCL, QTP and Data backup operation on the NAND.
14	  L3  L4	14 - Restore from NAND	-	QCL, QTP, and Data restore operation from the NAND.

*Nota: If you want exit from the system functions, press and hold the **FUNC** button at least 2 seconds.*

DEVICE selection

To select the external media device in system functions, it uses the DIP 6 of SW1:

- OFF = MMC/SD
- ON = USB

Documento generato automaticamente da **Qem Wiki** - <https://wiki.qem.it/>

Il contenuto wiki è costantemente aggiornato dal team di sviluppo, è quindi possibile che la versione online contenga informazioni più recenti di questo documento.