

Sommario

All the system functions are listed below.

If the “**PWD**” column shows ‘**Y**’, this means that the function requires a system password (default: “123”).

Funzioni di sistema

n.	Led ON	System Function	PWD	Description
1	 L1	01 - Reset Error Checksum	-	Reset error checksum. N.B.: if the checksum error is present, the led  L1 flashes
2	 L2	02 - Copy all files DEVICE → NAND	-	Copy all files from selected DEVICE to NAND Flash memory
3	  L2	03 - Copy all files NAND → DEVICE	-	Copy all files from NAND Flash to selected DEVICE
4	 L3	04 - Application delete	Y	Delete the application
5	  L3	05 - Application upload from DEVICE	Y	Upload the application from selected DEVICE
6	  L3	06 - System Settings	-	Adjust the system clock and select the DEVICE in use
7	   L3	07 - Downl. retentive data to DEVICE	-	Save the retentive data on selected DEVICE
8	 L4	08 - Set NEW Password	Y	Set a new password to access the “locked” system functions
9	  L4	09 - Remove all files from NAND Flash	Y	Cancel all files stored on the NAND Flash memory
10	  L4	10 - Show NAND Flash files	-	List the files stored on the NAND Flash memory
11	   L4	11 - Touch Calibration	-	Run the calibration procedure of the Touch Screen, if present
12	  L4	12 - Set Ethernet communic. parameter	-	Run the setup procedure for the Ethernet communication parameters (IP address,..., etc.)
13	   L4	13 - Backup to NAND	-	Run the backup of the QCL application, data and HMI application on NAND memory
14	   L4	14 - Restore from NAND	Y	Run the restore of the QCL application, data and HMI application from NAND memory

NB: To exit system functions press the keep the **F1** key or **FUNC** button for at least two seconds.

Documento generato automaticamente da **Qem Wiki** - <https://wiki.qem.it/>

Il contenuto wiki è costantemente aggiornato dal team di sviluppo, è quindi possibile che la versione online contenga informazioni più recenti di questo documento.