

Sommario

Procedure	3
-----------------	---

Procedure

To access the **System Functions**, start up the controller with **FUNC button** pressed.



FUNC

The QMOVE application, if present, is not executed and the led  L1 lights up.



Use the **FUNC button** to scroll through the functions.

The selected function is indicated by the combination of **L1-L2-L3-L4** leds lighted up.

The "System Functions" table gives the list of system functions and related led combinations.

Press the **BOOT button** for 2 seconds to execute the selected function.



BOOT

The **POW** led starts flashing to indicate that the selected function is being executed.



POW

When the function ends the **POW** led stops flashing.



POW

Press the **FUNC button** to restart the controller.



FUNC

If the function does not complete properly the **POW** stops and the **ERR** starts flashing



POW

ERR

The number of flashes indicates the type of error as shown in the table [System Function Error Messages](#).

Documento generato automaticamente da **Qem Wiki** - <https://wiki.qem.it/>

Il contenuto wiki è costantemente aggiornato dal team di sviluppo, è quindi possibile che la versione online contenga informazioni più recenti di questo documento.