

Sommario



To access the System Functions, start up the controller with FUNC button pressed.

The QMOVE application, if present, is not executed and the led **L1** lights up.



**Use FUNC button to scroll through the functions.
The selected function is indicated by the combination of L1-L2-L3-L4 leds lighted up.**

The “System Functions” table gives the list of system functions and related led combinations.



**Press BOOT button for 2 seconds to execute the selected function.
The POW led starts flashing to indicate that the selected function is being executed.**

When the function ends the **POW** led stops flashing.



Press FUNC button to restart the controller.

If the function does not complete properly the **POW** stops and the **ERR** starts flashing.

The number of flashes indicates the type of error as shown in the table [System Function Error Messages](#).

Documento generato automaticamente da **Qem Wiki** - <https://wiki.qem.it/>

Il contenuto wiki è costantemente aggiornato dal team di sviluppo, è quindi possibile che la versione online contenga informazioni più recenti di questo documento.