


## Sommario



The CPU has several operating statuses. The figure below shows the main status changes from the controller startup. The main operating statuses are RESET, READY, RUN and STOP.

The CPU events that determine a transition from one status to another are mainly linked to commands being sent by the development environment: **Run**, **Reset**, **Stop** and **Restart**.

**Application download** is the development environment procedure that allows to transfer a QMOVE application to the CPU.

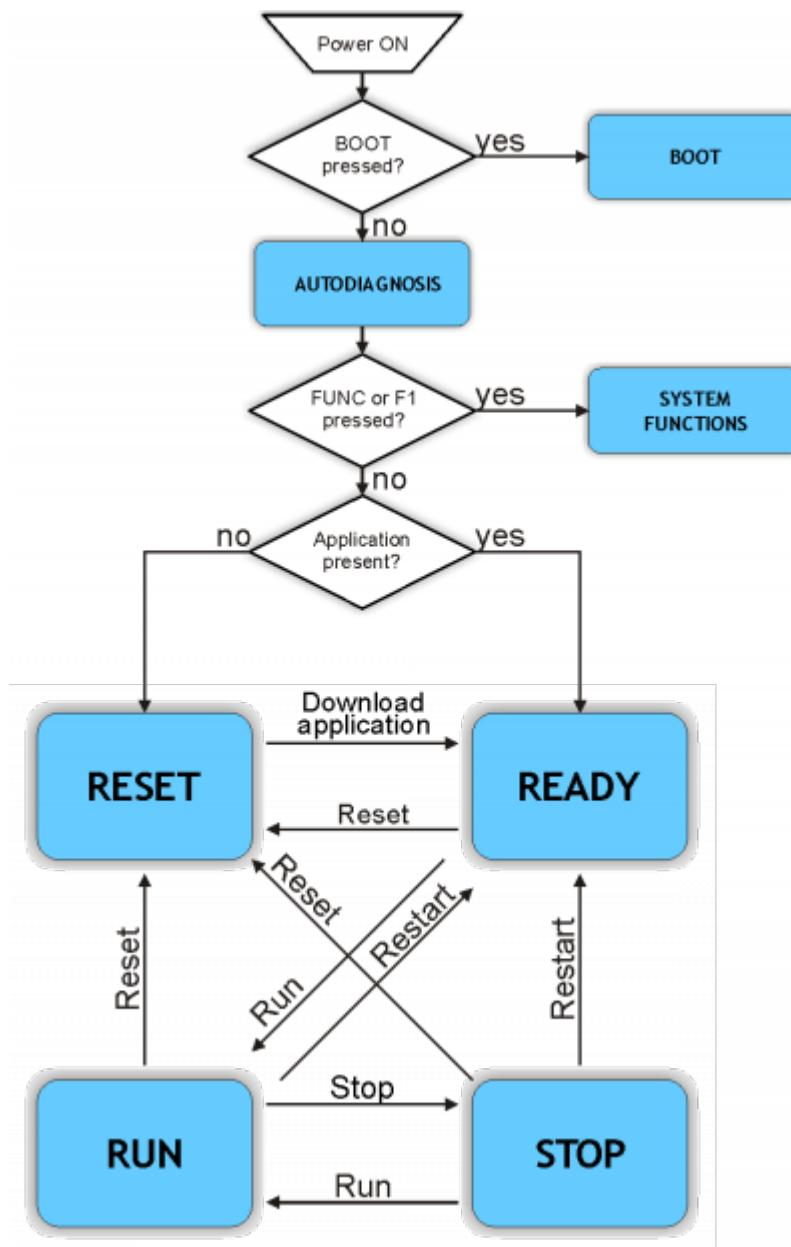

Documento generato automaticamente da **Qem Wiki** - <https://wiki.qem.it/>

Il contenuto wiki è costantemente aggiornato dal team di sviluppo, è quindi possibile che la versione online contenga informazioni più recenti di questo documento.