

Sommario

Connector

CN2			Terminal	RS232	RS422	RS485	Description
	1A	1B	1A	-	-	A	Terminal A - RS485
	2A	2B	2A	-	-	B	Terminal B - RS485
	3A	3B	3A	0V	0V	0V	USER PORT common
	4A	4B	4A	0V	0V	0V USER PORT common	
	5A	5B	5A	TX	-	-	Terminal TX - RS232
	6A	6B	6A	Terra			
			1B	-	RX	-	Terminal RX - RS422
			2B	-	RXN	-	Terminal RX N - RS422
			3B	-	TX	-	Terminal TX - RS422
			4B	-	TXN	-	Terminal TX N - RS422
			5B	RX	-	-	Terminal RX - RS232
			6B	Ground			

Setup of USER PORT electric standard

SW2	Num. Dip	Name DIP	Setting of DIP			Function
	1	JP2	ON	X ¹⁾	X ²⁾	Termination RS485
	2	JP3	ON	X ³⁾	X ⁴⁾	Polarization RS485
	3	JP1	ON	X ⁵⁾	X ⁶⁾	
	4		OFF	ON	OFF	Selection of USER PORT electric standard
	5		ON	OFF	OFF	
	6		OFF	OFF	ON	
ON ← OFF			RS485	RS422	RS232 ⁷⁾	

^{1), 2), 3), 4), 5), 6)} X = setting not significant

⁷⁾ the USER PORT can be used as PROG PORT with RS232 electric standard, setting ON in DIP-8 of SW1 and OFF in DIP-6 of SW2

Documento generato automaticamente da Qem Wiki - <https://wiki.qem.it/>

Il contenuto wiki è costantemente aggiornato dal team di sviluppo, è quindi possibile che la versione online contenga informazioni più recenti di questo documento.