

Sommario



To access the System Functions, start up the controller with FUNC button or F1 key pressed.

The QMOVE application, if present, it not executed and the led **L1** lights up.
Tools that have a display appears “**SYSTEM FUNCTIONS**”.



Use FUNC button or F1 key to scroll through the functions.
The selected function is indicated by the combination of L1-L2-L3-L4 leds lighted up and in instruments that have a display, you see the selected function in the “SYSTEM FUNCTIONS”.




The “System Functions” table gives the list of system functions and related led combinations.




Press BOOT button or @key@ key for 2 seconds to execute the selected function.
The POW led starts flashing to indicate that the selected function is being executed.

Instruments that have a display, you see the page “**SYSTEM FUNCTIONS**” as in the figure below.

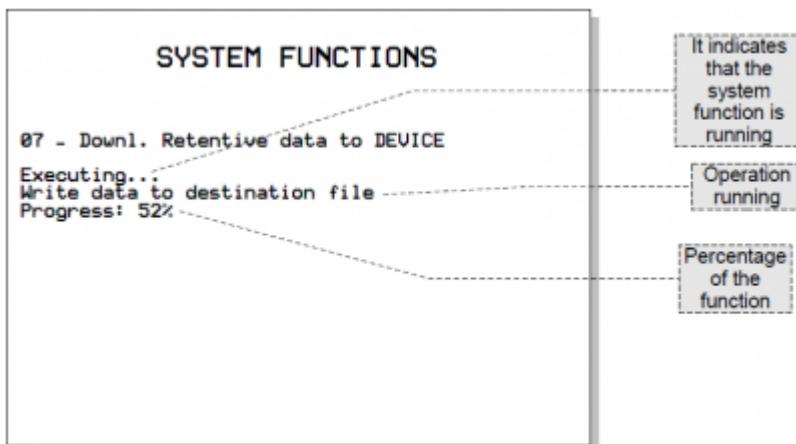


When the function ends the **POW** led stops flashing.

Instruments that have a display, you see the page “**SYSTEM FUNCTIONS**” as in the figure below.

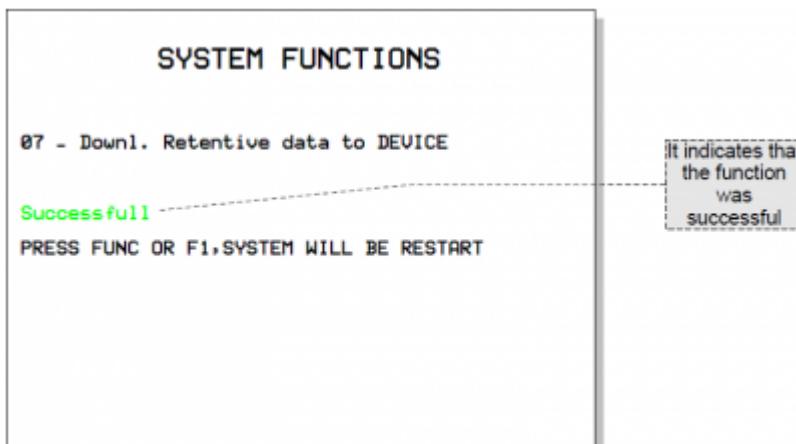

Press FUNC button or F1 key to restart the controller.

If the function does not complete properly the **POW** stops and the **ERR** starts flashing.

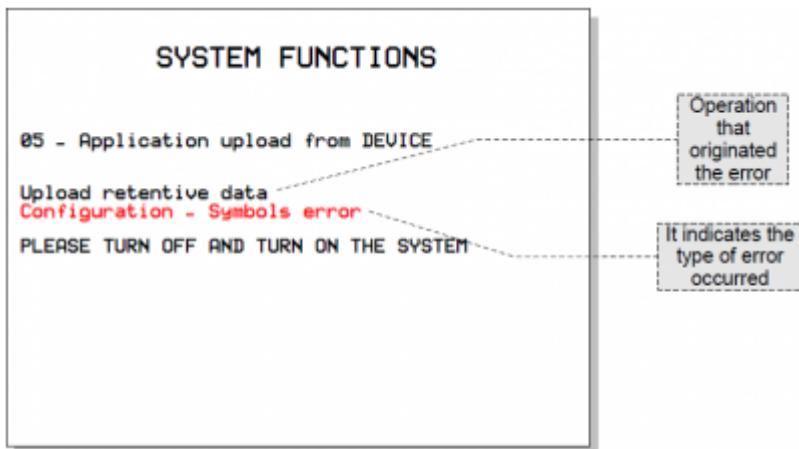

The number of flashes indicates the type of error as shown in the table [System Function Error Messages](#).

Documento generato automaticamente da **Qem Wiki** - <https://wiki.qem.it/>

Il contenuto wiki è costantemente aggiornato dal team di sviluppo, è quindi possibile che la versione online contenga informazioni più recenti di questo documento.