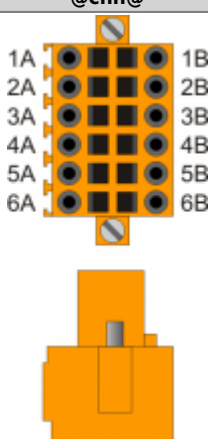
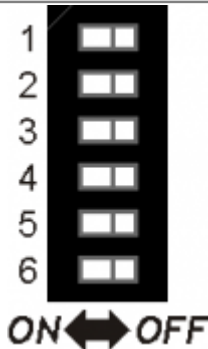


Índice

USER PORT connector

@cnn@	Terminal	RS232	RS422	RS485	Description
	1A	-	-	A	Terminal A - RS485
	2A	-	-	B	Terminal B - RS485
	3A	0V	0V	0V	USER PORT common
	4A	0V	0V	0V	USER PORT common
	5A	TX	-	-	Terminal TX - RS232
	6A	Ground			
	1B	-	RX	-	Terminal RX - RS422
	2B	-	RXN	-	Terminal RX N - RS422
	3B	-	TX	-	Terminal TX - RS422
	4B	-	TXN	-	Terminal TX N - RS422
	5B	RX	-	-	Terminal RX - RS232
	6B	Ground			

USER PORT electrical standard setting

@dip@	Num. Dip	Name DIP	Setting dei DIP			Function
	1	JP2	ON	X ¹⁾	X ²⁾	Termination RS485
	2	JP3	ON	X ³⁾	X ⁴⁾	Polarisation RS485
	3	JP1	ON	X ⁵⁾	X ⁶⁾	
	4		OFF	ON	OFF	USER PORT electrical standard selection
	5		ON	OFF	OFF	
	6		OFF	OFF	ON	
			RS485	RS422	RS232	

^{1), 2), 3), 4), 5), 6)} X = not significant setting

Documento generato automaticamente da **Qem Wiki** - <https://wiki.qem.it/>

Il contenuto wiki è costantemente aggiornato dal team di sviluppo, è quindi possibile che la versione online contenga informazioni più recenti di questo documento.