

Inhaltsverzeichnis

AUX2 PORT



To activate the internal termination resistance see paragraph „**Setup of AUX2 PORT polarisation and termination resistances**“

AUX2 PORT connector

CN4	Terminal	Symbol	Description
	1	0V	RS485 serial common
	2	B	Terminal RS485 B
	3	A	Terminal RS485 A

Setup of AUX2 PORT polarisation and termination resistances

SW4	Num. Dip	Name Dip	Setting of DIP	Function
	1	JP3	ON	Polarisation RS485
	2	JP2	ON	Termination RS485
	3	JP1	ON	Polarisation RS485
	4		X ¹⁾	None

¹⁾ X = setting not significant

Documento generato automaticamente da **Qem Wiki** - <https://wiki.qem.it/>

Il contenuto wiki è costantemente aggiornato dal team di sviluppo, è quindi possibile che la versione online contenga informazioni più recenti di questo documento.