

## Sommario

<b><i>Negative Transition-Sensing Toggle Contact</i></b> .....	3
--	---



## Negative Transition-Sensing Toggle Contact

<b>Function name</b>	NTSTCN_010
<b>Function version</b>	1.0
<b>Function state</b>	stable
<b>Compatibility with IEC61131-3</b>	not compatible

**Graphic symbol :**



**Input / Output :**

Name	Belonging Group	Access	Types of data	Description
reference	Normal	R , RW	F , B , W , L , S	Reference variable of the contact

**Description :**

**If the reference variable is FLAG type:**

The state of the right link passes alternatively from OFF to ON (toggle) at each negative transition, from 1 (one) to 0 (zero), of the reference variable (indicated with **reference**). The state of the left link is ignored.

**If the reference variable is BYTE, WORD, LONG and SINGLE type:**

The state of the right link passes alternatively from OFF to ON (toggle) at each negative transition, from a value different from 0 (zero) to a value equal to 0 (zero), of the reference variable (indicated with **reference**). The state of the left link is ignored.

Documento generato automaticamente da **Qem Wiki** - <https://wiki.qem.it/>

Il contenuto wiki è costantemente aggiornato dal team di sviluppo, è quindi possibile che la versione online contenga informazioni più recenti di questo documento.