

Sommario


EN - ENO, execution flow control	3
Reference variable groups	3
Types of data access of reference variable	3
Types of data for the reference variable	4

EN - ENO, execution flow control

According to the IEC61131-3 standards specification, an **EN** (ENable) boolean input and eventually un'uscita booleana **ENO** (ENable Output) boolean output will have to be used with functions in Ladder.

Execution of the operations defined in the function will be controlled according to the following rules:

- If **EN** is FALSE (0) when the function is called, the operations defined by the function will not be executed and **ENO** sarà will be set to FALSE (0) by the programmable controller system (QMove).
- Otherwise, **ENO** will be set to TRUE (1) by the programmable controller system (QMove), and the operations defined by the function will be executed.
These operations can include the assignment of a boolean value in **ENO**.
- If internal errors occur during the execution of one of the standard functions, the **ENO** output of that function will be set to FALSE (0) by the programmable controller system (QMove).

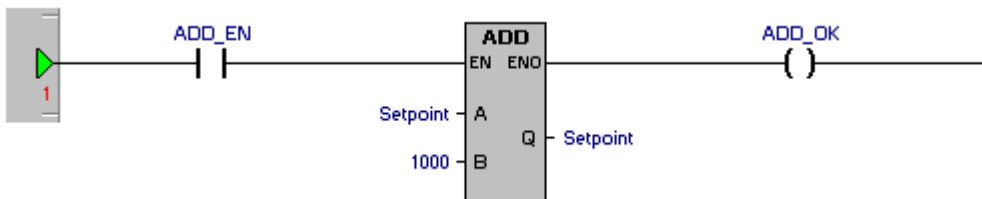

The figure above shows a typical use of the **EN** - **ENO** states in a Ladder grid.

Equivalent QCL code:

```
; start of RUNG
power_flow = 1
; management of normally open contact ADD_EN
power_flow = power_flow AND ADD_EN
; management of ADD function where a Setpoint is added to 1000
IF power_flow
  Setpoint = Setpoint + 1000
ENDIF
; management of the normally open coil ADD_OK
ADD_OK = power_flow
```

It can be seen that in the equivalent code, if the **EN** input of the **ADD** function is OFF, the whole function is not executed.

Reference variable groups

The Ladder language defines that each reference variable falls under one of the following groups:

(UNCHECKED)
(NORMAL)
(COMMAND)
(ARRAY NAME)
(TIMER NAME)
(STATIC NAME)
(INDEX NAME)
(DEVICE NAME)
(DEVICE PARAMETER)
(DEVICE COMMAND)

The UNCHECKED group is used to define variables that do not undergo any validity control. This type of group is only used if absolutely necessary since it does not allow to identify an invalid variable setting during the project Check and Compilation procedures.

Types of data access of reference variable

Ladder, as in QCL, has the following 3 access types :

R	(READ)
W	(WRITE)
RW	(READ / WRITE)

Types of data for the reference variable

Ladder, as in QCL, has the following 5 types of data :

F	(FLAG)
B	(BYTE)
W	(WORD)
L	(LONG)
S	(SINGLE)

Documento generato automaticamente da **Qem Wiki** - <https://wiki.qem.it/>

Il contenuto wiki è costantemente aggiornato dal team di sviluppo, è quindi possibile che la versione online contenga informazioni più recenti di questo documento.