

目录

VR10SWrToAsc	3
IMPLEMENTATION	3
Errcode	3

VR10SWrToAsc

V = Variables

R = Reading functions

SIGNED WORD → ASCII

The VR10SWrToAsc function Converts a Signed Word variable type (word with sign) in an Ascii variable type.

IMPLEMENTATION

VR10SWrToAsc (value, index, array, errcode)

Parameters:

IN/OUT	VARIABLE TYPE	EXAMPLE NAME	DIM	
IN	GLOBAL	value	W	Data value to convert
IN	GLOBAL	index	L	Index of the array element to start the “deposit” of the converted data
OUT	ARRGBL	array	B	Array containing the converted data (must be declared with at least “index + 3” items)
OUT	GLOBAL	errcode	F	Variable that indicates a possible error on the function

Errcode

After calling the function, 'errcode' can take certain values, the meaning of these values is summarized below:

0: No error

Example

Transforms the value -100 (signed word) in an Ascii value

```
value = -100
index = 1
VR10SWrToAsc (value, index, array, errcode)
;On the array will be :
; array[1] = 70
; array[2] = 70
; array[3] = 57
; array[4] = 67      (FF9C H)
```

Note

Documento generato automaticamente da **Qem Wiki** - <https://wiki.qem.it/>

Il contenuto wiki è costantemente aggiornato dal team di sviluppo, è quindi possibile che la versione online contenga informazioni più recenti di questo documento.