

Sommario

VT10OnChVar	3
IMPLEMENTATION	3

VT10OnChVar

V = *Variables*

T = *Control functions*

The VT10OnChVar function checks the value of a variable and set a flag if the value changes.

IMPLEMENTATION

VT10OnChVar (var01, changed)

Parameters:

IN/OUT	VARIABLE TYPE	EXAMPLE NAME	DIM	
IN	SYSTEM / INPUT / OUTPUT	var01	F/L	Variable to check
OUT	GLOBAL	changed	F	Change execute flag

Example

In the example, if the 'pippo' variable change its value output is activated the 'ofUscita' output.

VT10OnChVar (pippo, changed)

```
IF changed
    changed = 0
    SETOUT ofUscita
ENDIF
```

Note

- To be effective, the function should be placed at a point of the application that runs on every logical round.
- The flag that signals the change must be reset externally to the function.

Documento generato automaticamente da **Qem Wiki** - <https://wiki.qem.it/>

Il contenuto wiki è costantemente aggiornato dal team di sviluppo, è quindi possibile che la versione online contenga informazioni più recenti di questo documento.