

Sommario

0.0.0.0.1 Connector

CN2	Terminal	RS232	RS422	RS485	Description	
1A	1A	-	-	-	A	Terminal A - RS485
2A	2A	-	-	-	B	Terminal B - RS485
3A	3A	0V	0V	0V	0V	USER PORT common
4A	4A	0V	0V	0V	0V	USER PORT common
5A	5A	TX	-	-	-	Terminal TX - RS232
6A	6A	Ground				
1B	1B	-	RX	-	-	Terminal RX - RS422
2B	2B	-	RXN	-	-	Terminal RX N - RS422
3B	3B	-	TX	-	-	Terminal TX - RS422
4B	4B	-	TXN	-	-	Terminal TX N - RS422
5B	5B	RX	-	-	-	Terminal RX - RS232
6B	6B	Ground				

0.0.0.0.2 Setting USER PORT electric standard

SW2	Num. Dip	Name Dip	Setting of DIP			Function
1	1	JP2	ON	X ¹⁾	X ²⁾	Termination RS485
2	2	JP3	ON	X ³⁾	X ⁴⁾	Polarisation RS485
3	3	JP1	ON	X ⁵⁾	X ⁶⁾	
4	4		OFF	ON	OFF	Selection of USER PORT electric standard
5	5		ON	OFF	OFF	
6	6		OFF	OFF	ON	
ON ↔ OFF			RS485	RS422	RS232⁷⁾	

^{1), 2), 3), 4), 5), 6)} X = setting not significant

⁷⁾ the USER PORT can be used as PROG PORT with RS232 electric standard, setting ON in DIP-8 of [SW1](#) and OFF in DIP-6 of [SW2](#)

Documento generato automaticamente da **Qem Wiki** - <https://wiki.qem.it/>

Il contenuto wiki è costantemente aggiornato dal team di sviluppo, è quindi possibile che la versione online contenga informazioni più recenti di questo documento.