

Sommario

MDI_P1P20F - 022 : Installation manual	3
1. Informations	3
1.1 Release	3
1.1.1 Specifications/Copyright	3
2. Description	4
3. Main Page	5
3.1 Command bars and information	5
3.2 Machine states	5
3.3 Common keys	6
4. Main Menu	7
4.1 Password	8
5. First start-up	8
5.1 Accessing the Setup	8
5.2 J1P20F Preliminary Settings	9
5.2.1 HMI Calibration	9
5.3 Machine settings	10
5.3.1 Generic parameters	10
5.3.2 Machine parameters	12
5.3.3 Default parameters	14
5.4 Calibrations	14
5.4.1 Conveyor calibration	15
5.4.2 Bridge calibration	16
5.4.3 Offset calibration of the pieces presence sensor	17
5.4.4 Set Heads parameters	18
5.4.5 Calibration of dynamic corrections ascent/descent heads	20
6. Diagnostic	22
6.1 Digital inputs	23
6.2 Digital outputs	23
6.3 Conteggi	23
6.4 Uscite analogiche	24
6.5 Informazioni connessione CAN	24
6.6 Informazioni di sistema	25
7. Messaggi di warning	26
8. Allarmi	27
8.1 Storico allarmi	27
9. Varie	28
9.1 Sequenza Avviamento Motori	28
9.1.1 Avviamento Motori su J1-P20F (MP-05=1)	28
9.1.2 Avviamento Motori su Modulo RMC (MP-05=2)	29
9.1.3 Avviamento Motori su Modulo RMC (MP-05=3)	29
10. Assistenza	31
Repair	31
Shipping	31

MDI_P1P20F - 022 : Installation manual

1. Informations

1.1 Release

This document is valid in its entirety except for errors or omissions.

			
Document:	mdi_p1p20f-022		
Description:	Installation manual p1p20f-022		
Editor:	Omar Sbalchiero		
Approver	Gabriele Bazzi		
Link:	https://www.qem.eu/doku/doku.php/en/strumenti/qmoveplus/j1p20/p1p20f-022/mdi_p1p20f-022		
Language:	English		
Release document	Description	Note	Date
01	New manual		18/09/2020

1.1.1 Specifications/Copyright

The copyright to this manual are reserved. For no reason, this document may be copied or reproduced in any form without the QEM permission.

QEM has no assurances or warranties regarding to content. Qem disclaims any responsibility relating to warranties of fitness for any particular purpose. The informations in this document are subject to change without notice. QEM not assumes responsibility for any error that may appear in this document

Trademarks :

- QEM® is a registered trademark.
- Microsoft® and MS-DOS® ar registered trademarks of Windows® and it is a trademark of the Microsoft Corporation.

2. Description

The **P1P20F - 022** software, controls the automation of **sanders/smoothing** machines.


Main features

- control of **20 heads**
- control the **sequential start-up of motors** (to limit the excessive current demand)
- also control of the **bridge move**
- for each head you can set **advances/delays working** to the **start/end** of the piece
- the ascent/descent controls of the sanding heads, calculated **automatically as the speed** of the conveyor belt changes
- counts the **meters worked** and is able to work up to **30 pieces** at the same time

Other features

- HMI with touchscreen
- Function keys
- Work programs
- Alarm messages
- Warning messages
- Reset defective pieces
- Reset of all piece in process
- Offset correction of part presence limit
- How heads are processed
 1. Sanding
 2. Milling
 3. Grinding
 4. Brushing
 5. Water jet

3. Main Page

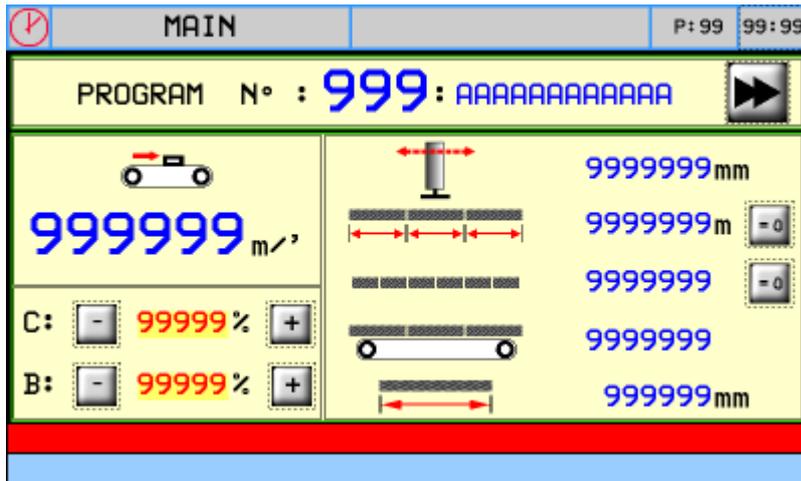

3.1 Command bars and information

The bars at the top and bottom of each page provide the following information:



A	Machine states
B	Page name
C	Additional page description
D	Page number
E	Watch
F	Alarm on (red background)
G	Warning (blue background)
	Current speed of conveyor belt
N:	Setting conveyor belt speed
P:	Setting bridge speed
	Position of the Bridge
	Machined linear meters
	Number of total work pieces
	Number of pieces currently being processed in the machine
	Last piece length in process

3.2 Machine states

Simbol	Description
	Manual
	Emergency
	Automatic
	Works mode
	Calibration
	Not used


3.3 Common keys

Simbol	Description
	Scroll through programs
	Save and exit: setup values that you set are saved to internal memory and executed
	Open program
	Page forward
	Page backward
	Exit without saving: the setup values entered are not saved and the values in the internal memory are reloaded
	MENU page
	SETUP page (protected with password)
	WORK PROGRAMS
	RESET TOTAL PIECES
	RESET PARTIAL PIECES
	ALARMS
	Page exit

• 4. Main Menu



From **MAIN PAGE** press the  key

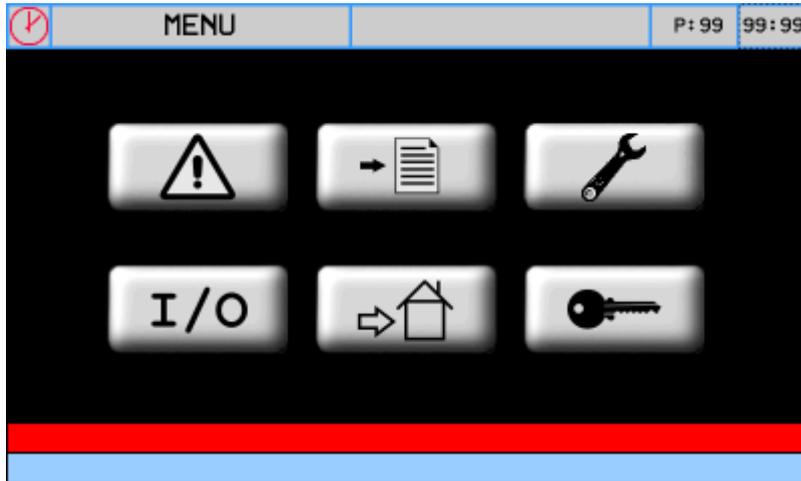

	Allarms
	Access to programs
	Functions menu
	Diagnostic
	Homing bridge
	Access to setup

• 4.1 Password

Installer Password **462**

5. First start-up



For proper start-up of the machine, it's recommended to follow the order of the activities described below

J1-P20F Controller's Preliminary Calibration

1. HMI calibration (**Touch calibration** screen and setting of the **language**)

Machine Settings

1. Check the correctness of the **GP** and **MP** parameters (**Generic parameters** and **Machine Parameters**)
2. Check the **machine wiring** with **Diagnostics** pages
3. Check the **direction of the Conveyor and tilting Bridge** with the forward/backward controls from the manual page

Calibrations

1. Check the **Counter Direction** and calibrate the **Conveyor Belt Resolution**
2. Calibrate the maximum speed of the conveyor belt
3. Calibrate the **offset of the "piece presence" limit switch**
4. **Heads calibrating**
 1. Tool diameter
 2. Introduce **distance of heads from the end of the limit switch of presence piece**
 3. **Calibration of dynamic corrections ascent/descent heads** depending on the speed of the conveyor belt

5.1 Accessing the Setup



You can access the setup in two modes:

1. from the **MENU** page press  key

2. from the **MAIN PAGE** press  function key



Access granted only if there aren't parts in the machine

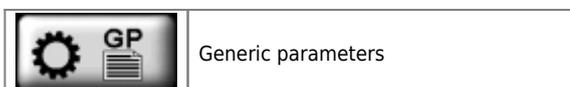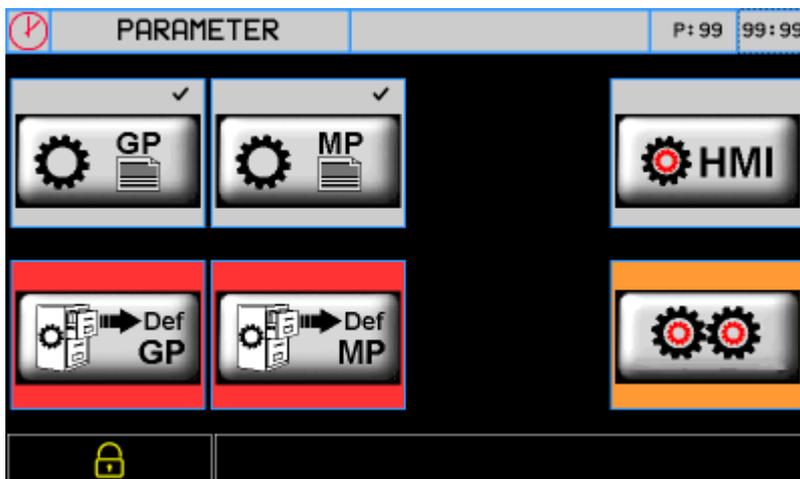

	Machine parameters
	Load default generic parameters
	Load default machine parameters
	HMI Calibration
	Conveyor, bridge and heads calibration

To disable the password until the next restart press , the icon must become 

To return to the **MENU** page, press the  key

5.2 J1P20F Preliminary Settings


5.2.1 HMI Calibration

To access from the **SETUP** page press the  key



Parameter name	Default	Range	Description
LOGO	ON	OFF ÷ ON	OFF : logo not showed ON : logo showed
LANGUAGE	en_GB	-	en_GB : english it_IT : italian
BUZZER	ON	OFF ÷ ON	OFF : disable ON : enable
DATA	-	-	Insert data
TIME	-	-	Insert time
DAYLING SAVING TIME	OFF	OFF ÷ ON	OFF : disable ON : enable

To calibrate the touch screen, press  key

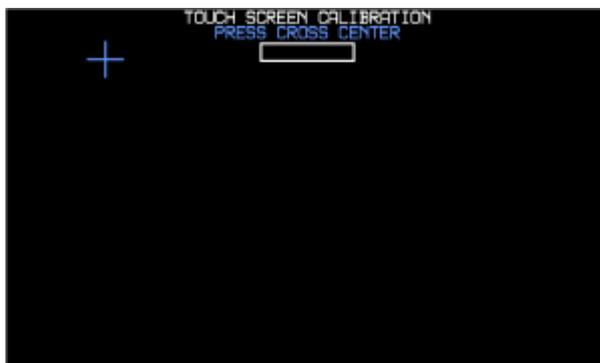

Follow the instruction.

1. 5.3 Machine settings

5.3.1 Generic parameters



To access, from the **Generic Parameters** page, press the  key



- **GP-XX** = Generic Parameters, **XX** = number
- **P.ter** = Parameters
- **U.M.** = Unit Measure
- **Def.** = Default


<i>P.ter</i>	<i>U.M.</i>	<i>Def.</i>	<i>Range</i>	<i>Description</i>
GP-01	-	4000	P (Pulse)	Encoder pulses x 4 corresponding to the space set in the Measure .
GP-02	-	400.0	M (Measure)	Space corresponding to the encoder pulses in the Pulse parameter. Note: - the P/M ratio must be between 0.000935 and 4.000000.
GP-03	-	1	0 ÷ 3	Decimal point position on the measurement of the conveyor belt view. 0 =xxxx, 1 =xxx.x, 2 =xx.xx, 3 =x.xxx
GP-04	-	-	-	<i>n.u.</i>
GP-05	-	1	0 ÷ 1	Position of heads with conveyor belt speeds below minimum (<i>GP-06</i>) 0 = remain in a low position 1 = go up
GP-06	-	0.1	0 ÷ 999999	Minimum speed of the conveyor.
GP-07	-	0.5	0 ÷ 999999	Delta speed beyond which the filter intervenes (<i>GP-08</i>).
GP-08	msec	50	0 ÷ 9999	Filter value of the tape speed.
GP-09	-	0	0 ÷ 5	Frequenzimeter sampling time (used to determine the speed of the conveyor belt) 0 = 240 ms, 1 = 480 ms, 2 = 24 ms, 3 = 120 ms, 4 = 960 ms, 5 = 1920 ms
GP-10	-	0	0 ÷ 1	0 = Store parts when turned off 1 = Does not store parts when switched off
GP-11	-	0	0 ÷ 1	Piece acquisition (In9) below the minimum speed . 0 = Enable 1 = Disable
GP-12	mm	10.0	0 ÷ 9999	Space under which two nearby pieces are continuously machined Note: The counting of pieces always counts 2 pieces.
GP-13	-	-	-	<i>n.u.</i>
GP-14	msec	1000	0 ÷ 9999	Time T1 between starting a motor and the next
GP-15	msec	1000	0 ÷ 9999	Time T2 between the start of the last motor and the activation of the end start motor output O18
GP-16	-	0	0 ÷ 1	Position abrasive change. 0 = backward limit-switch 1 = forward limit-switch
GP-17	-	0	0 ÷ 1	Carter Contact Activation Status. 0 = NC (Normally Closed) 1 = NO (Normally Open)

P.ter	U.M.	Def.	Range	Description
GP-18	-	4000	P (Pulse) Encoder Bridge	Bridge encoder pulses x 4 corresponding to the space set in the Measure .
GP-19	-	400.0	M (Measure) Ponte	Bride Space corresponding to the encoder pulses in the Pulse parameter. Note: - the P/M ratio must be between 0.000935 and 4.000000.
GP-20	-	1	0 ÷ 3	Decimal point position on the speed Bridge view. 0 =xxxx, 1 =xxx.x, 2 =xx.xx, 3 =x.xxx
GP-21	-	1	0 ÷ 3	Decimal point position on the measure Bridge view. 0 =xxxx, 1 =xxx.x, 2 =xx.xx, 3 =x.xxx
GP-22	-	2000	-99999 ÷ 999999	Maximum measure of the Bridge.
GP-23	-	0	-99999 ÷ 999999	Minimum measure of the Bridge.
GP-24	-	100	-99999 ÷ 999999	Slow-down measure of the Bridge.
GP-25	-	0	-99999 ÷ 999999	Homing measure of the Bridge.
GP-26	-	1.0	-9999 ÷ 99999	Homing Search Speed of the Bridge.
GP-27	-	0	0 ÷ 1	Homing Search Direction of the Bridge. 0 = Forward; 1 = Backward.
GP-28	sec	0.5	0 ÷ 60.0	T3 . Time passage operation heads descent / motor start. This is the waiting time from activating I2 input, for the instrument function mode from "Head activation" to "Motor Start".
GP-29	sec	0.5	0 ÷ 60.0	T4 . Transition time from motor start/head descent operation. This is the waiting time from activating I2 input, for the instrument function mode from "Motor Start" to "Head activation".
GP-30	-	0	0 ÷ 3	Unit of measure "Time to activate/deactivate Mix Output". 0 = The tA and td deactivation time are expressed in seconds. 1 = The activation time tA is expressed in seconds, the deactivation time td is expressed in minutes. 2 = The activation time tA is expressed in minutes, the deactivation time td is expressed in seconds. 3 = The tA activation time and td deactivation time are expressed in minutes.
GP-31	-	0.5	0 ÷ 999.0	Ta . Activation time Mix output. This is the time (in minutes or seconds) to activate the U19 output (mix out) to execute the mix cycle.
GP-32	-	0.5	0 ÷ 999.0	Td . Deactivation time Mix output. This is the time (in minutes or seconds) to deactivate the U19 output (mix out) to execute the mix cycle.
GP-33	-	0	-99999 ÷ 999999	Increase/Decrease minimum and maximum measure of the Bridge. It is the value that is added or subtracted from the maximum and /or minimum measure of the Bridge by pressing the relative keys on the main page of the bridge view.
GP-34	-	3	0 ÷ 99	Number of check for piece presence input. The instrument checks the status of the input every 3 milliseconds. this parameter indicates how many checks and how many milliseconds the input must maintain logical state so that the instrument acquires the variation.



For exit from the **Generic Parameters** page, press the  key

On the display is showed:

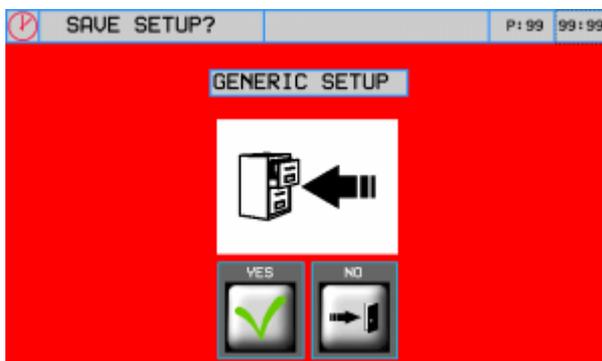

Press **"YES"**, if you want to store the introduced parameters.
Press **"NO"**, if you want exit, without saving the introduced parameters.

1. 5.3.2 Machine parameters



To access, from the **Machine Parameters** page, press the  key



- **MP-XX** = **M**achine **P**arameters, **XX** = number
- **P.ter** = **P**arameters
- **U.M.** = **U**nit **M**easure
- **Def.** = **D**efault


N.ter	U.M.	Def.	Range	Description
MP-01	-	1	1 ÷ 19	Heads number.
MP-02	mm	0	0 ÷ 999999	Machine length. Note: space between the piece presence sensor and the end of the machine.
MP-03	-	0	0 ÷ 2	Command/Control of the conveyor belt 0 - External Command/Control - Reading the speed. 1 - Command - reading the speed - Analog output. 2: - Command and Control with feedback from encoder - Reading the speed - Analog output - Start/Stop of the instrument
MP-04	-	0	0 ÷ 1	Bridge command 0 = External control . 1 = Bridge control with minimum, maximum limit-switch and slow-down. 2 = Bridge control with encoder minimum, maximum limit-switch and slow-down.
MP-05	-	0	0 ÷ 1	Motor Startup Sequence 0 = disable. 1 = enable to J1-P20. N.B. Motor start outputs are in common with head descent outputs. 2 = enabled on RMC module. 3 = enabled on RMC module. N.B. It is activated automatically at the input of the piece in the machine.
MP-06	-	-	-	-
MP-07	-	-	-	-
MP-08	m/'	5.0	0 ÷ 5.0	Maximum speed (AO1 = 10 Volt) of the conveyor belt (<i>MP-03</i> > 0) (see " Maximum speed settings ").
MP-09	m/'	3.0	0 ÷ 5.0	Speed in automatic of the conveyor belt (<i>MP-03</i> > 0)
MP-10	m/'	1.0	0 ÷ 5.0	Jog speed of the conveyor belt (<i>MP-03</i> > 0).
MP-11	-	0	0 ÷ 1	Starting condition of the bridge in automatic mode (<i>MP-04</i> = 1). 0 = Start with tape 1 = Start when a piece enter
MP-12	s	1.000	0 ÷ 999.0	Delay time between the conveyor belt start and bridge start (<i>MP-05</i> = 1).
MP-13	%	5.0	0 ÷ 100.0	% maximum speed of the bridge in automatic mode.
MP-14	%	5.0	0 ÷ 100.0	Slow speed of the bridge in automatic mode (<i>MP-04</i> = 1)
MP-15	%	50.0	0 ÷ 100.0	Jog Speed of the bridge (<i>MP-04</i> = 1).

N.ter	U.M.	Def.	Range	Description
MP-16	s	2.000	0 ÷ 999.0	Bridge stop time on the maximum and minimum limit-switches (<i>MP-04</i> = 1).
MP-17	-	0	0 ÷ 1	Direction of the pieces input. 0 = right 1 = left



For exit from the **Machine Parameters** press the  key

On the display is showed:

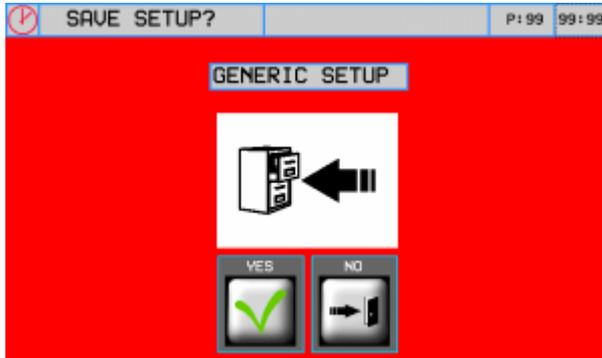


Press **"YES"**, if you want to store the introduced parameters.
Press **"NO"**, if you want exit, without saving the introduced parameters.

1. 5.3.3 Default parameters


To access to the “load default parameters” page, from the **SETUP** page:


- press the  key for load the **default generic parameters**, or
- press the  key for load the **default machine parameters**.


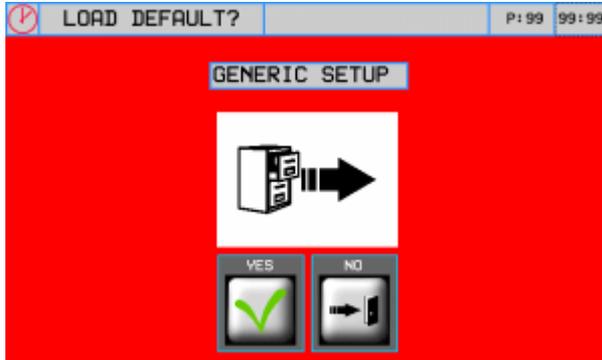


Press **“YES”**, if you want “load” the default generic parameters.
 Press **“NO”**, if you want exit, without saving “load” the default generic parameters.

5.4 Calibrations

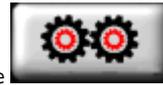

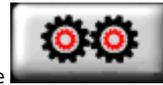To access at the Calibration page, from the **SETUP** page press the  key

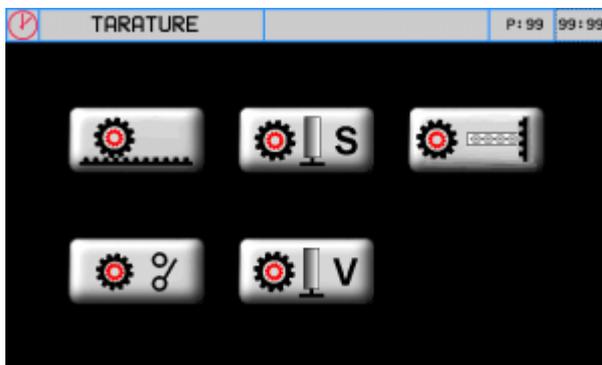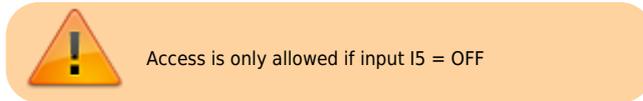

	Conveyor calibration
	Offset calibration of the piece presence sensor
	Set Heads parameters
	Calibration of dynamic corrections of ascent/descent heads
	Bridge calibration



To return to the **setup** page press the  key


5.4.1 Conveyor calibration

To access on the conveyor calibration, press the  key

The following page appears



Procedure

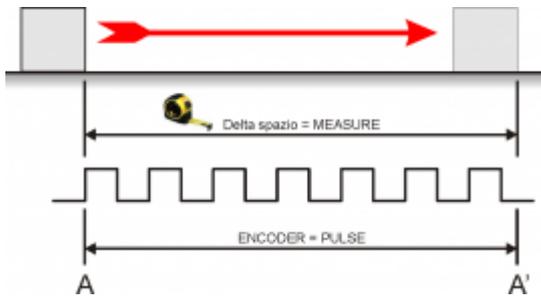

- Set **1 Volt**, on the **ANALOG OUTPUT** parameter
- Presse the  key (Analog output +1 Volt), check that the value of the ENCODER parameter increases (if it decreases, the two phases of the encoder in the CN9 connector must be reversed).
- A - A' = Longest possible space
- Mark the starting position (A)
- Reset the **ENCODER** value: 
- Execute the movement from A to A'
- Write on the **PULSE** parameter, the value showed in the **ENCODER** parameter
- Measure the **delta space** A - A'
- Write the **delta space** value A - A' on the **MEASURE** parameter
- verify the value that appears in the **VEL** parameter, when you press the  key
- The **maximum speed** value of the conveyor will be **10 times** larger than the **VEL** showed. this value should be written to the **MP-08** parameter

Important:

- The **PULSE** value must always be greater than the value of **MEASURE** (the optimal value is "MEASURE x 10 = PULSE")
- Introduce the **MEASURE** value into the **unit of measure** that you choosen. Example: if you choose 1/10mm unit of measure and the **delta space** measure is 133.5mm, introduce the value 1335 into the **MEASURE** parameter
- The **Pulse** and **Measure** parameters inserted here, will be automatically transcribed into the **GP-01** and **GP-02** parameters



For exit from the **Conveyor calibration** page press the  key


1. 5.4.2 Bridge calibration

To access on the calibration of the Bridge, press the  key

The following page appears



Procedura

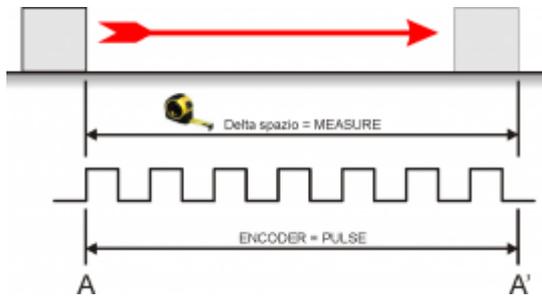

- Set **1 Volt**, on the **ANALOG OUTPUT** parameter
- Presse the  key (Out analogica +1 Volt), check that the value of the ENCODER parameter increases (if it decreases, the two phases of the encoder in the **CN10** connector must be reversed).
- A - A' = Longest possible space
- Mark the starting position (A)
- Reset the **ENCODER** value: 
- Execute the movement from A to A'
- Write on the **PULSE** parameter, the value showed in the **ENCODER** parameter
- Measure the **delta space** A - A'
- Write the **delta space** value A - A' on the **MEASURE** parameter
- Verify the value that appears in the **VEL** parameter, when you press the  key
- The **maximum speed** value of the bridge will be **10 times** larger than the **VEL** showed.

Important:

- The **PULSE** value must always be greater than the value of **MEASURE** (the optimal value is "MEASURE x 10 = PULSE")
- Introduce the **MEASURE** value into the **unit of measure** that you choosen. Example: if you choose 1/10mm unit of measure and the **delta space** is 133.5mm, measure is 133.5mm, introduce the value 1335 into the **MEASURE** parameter
- The **Pulse** and **Measure** parameters inserted here, will be automatically transcribed into the **GP-18** and **GP-19** parameters

For exit from the **Bridge calibration** page press the  key


1. 5.4.3 Offset calibration of the pieces presence sensor

Offset calibration is used to calculate the difference between the **activation point** and the **deactivation point** of the limit-switch piece presence.



To access on the **offset calibration** page, press the key

The following page appears:

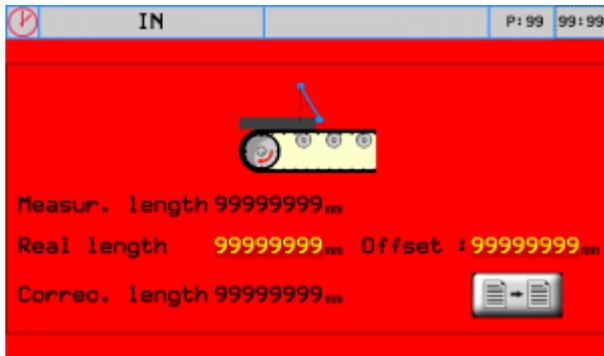

1. Measure the length of a piece;
2. Enter the length in the **Real length** parameter;
3. Start the conveyor (the instrument will read the length of the piece, using the sensor);
4. The instrument will show the length value of the piece on the **Measur. length** value;




5. Press the key and the instrument will calculate the offset value of the limit-switch

1. 5.4.4 Set Heads parameters




To access on the **Set Heads parameters** page, press the    key

The following page appears

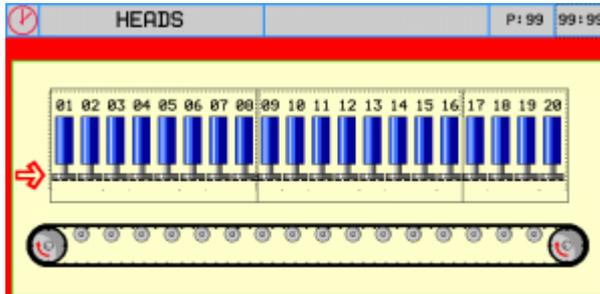

or

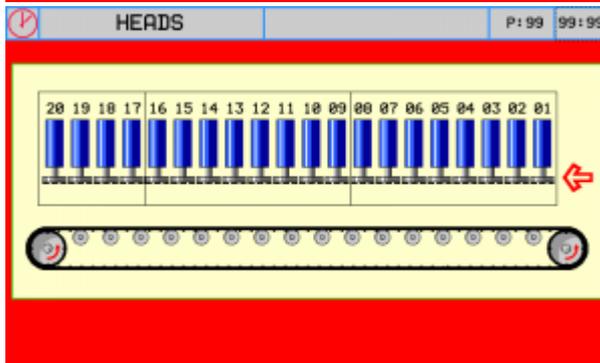

Note:

With the *MP-16* parameter = **direction** of the pieces input, you choose (graphically) the direction of entry of the workpieces.

Head	Type	Interaxis	Diameter
1	9999	99999999 _{mm}	99999999 _{mm}
2	9999	99999999 _{mm}	99999999 _{mm}
3	9999	99999999 _{mm}	99999999 _{mm}
4	9999	99999999 _{mm}	99999999 _{mm}
5	9999	99999999 _{mm}	99999999 _{mm}
6	9999	99999999 _{mm}	99999999 _{mm}
7	9999	99999999 _{mm}	99999999 _{mm}
8	9999	99999999 _{mm}	99999999 _{mm}

Head	Type	Interaxis	Diameter
9	9999	99999999 _{mm}	99999999 _{mm}
10	9999	99999999 _{mm}	99999999 _{mm}
11	9999	99999999 _{mm}	99999999 _{mm}
12	9999	99999999 _{mm}	99999999 _{mm}
13	9999	99999999 _{mm}	99999999 _{mm}
14	9999	99999999 _{mm}	99999999 _{mm}
15	9999	99999999 _{mm}	99999999 _{mm}
16	9999	99999999 _{mm}	99999999 _{mm}

HEADS			
Head	Type	Interaxis	Diameter
17	9999	99999999 _{mm}	99999999 _{mm}
18	9999	99999999 _{mm}	99999999 _{mm}
19	9999	99999999 _{mm}	99999999 _{mm}
20	9999	99999999 _{mm}	99999999 _{mm}

Note:

Tap the touch to select the group of heads

Parameter name	Unit of measure	Default	Range	Description
Type	-	-	0 ÷ 5	How the head works. 0: disable 1: sander 2: milling 3: grinding 4: brushing 5: jet air/water
Wheelbase	mm	-	0 ÷ 99999.0	Space between the piece presence limit-switch and the center of the head .
Diameter	mm	-	0 ÷ 99999.0	Tool diameter.



For exit from the **Set Heads parameters** press the key


1. 5.4.5 Calibration of dynamic corrections ascent/descent heads



With this calibration, the heads will be **turned on/off** in the right place, even if the speed of the conveyor belt is varied.
Note: turn off the motor start by putting OFF the motor rotation start button.



To enter from the **MAIN MENU** press the key

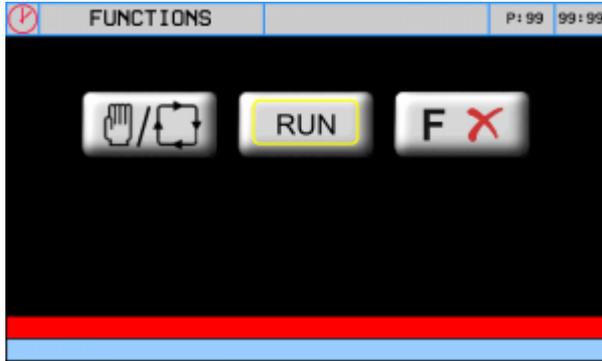


Press the key to stop the motors



For return on the **MAIN MENU** page, press the key



To enter, from the **CALIBRATION** page, press the key

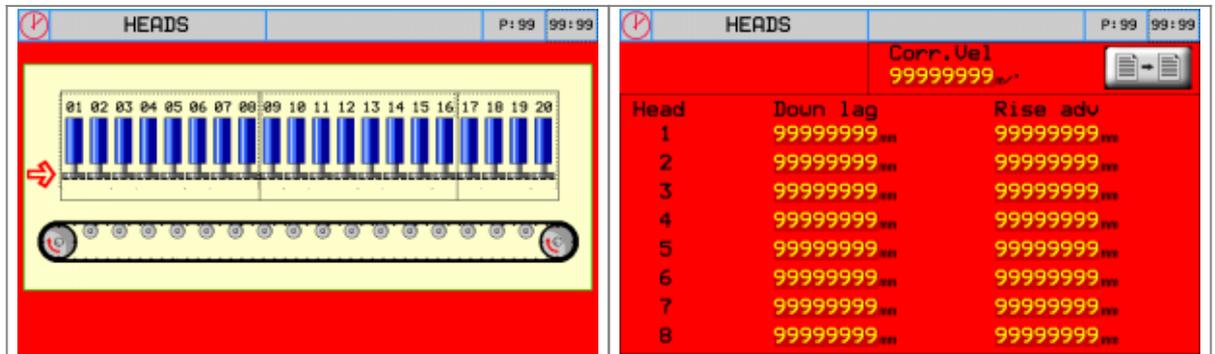


Copy the value to all other heads



Tap the touch to select the group of heads

Parameter	U.M.	Def.	Range	Description
CORR. VEL	m/'	3.0	0 ÷ 5.0	Reference speed of the dynamic calibration
Downlag	mm	-	-999.0 ÷ 999.0	(+) Delay space of the descent of the head from the begin piece
Risesdv	mm	-	-999.0 ÷ 999.0	(+) Advance space of the ascent of the head from the end piece

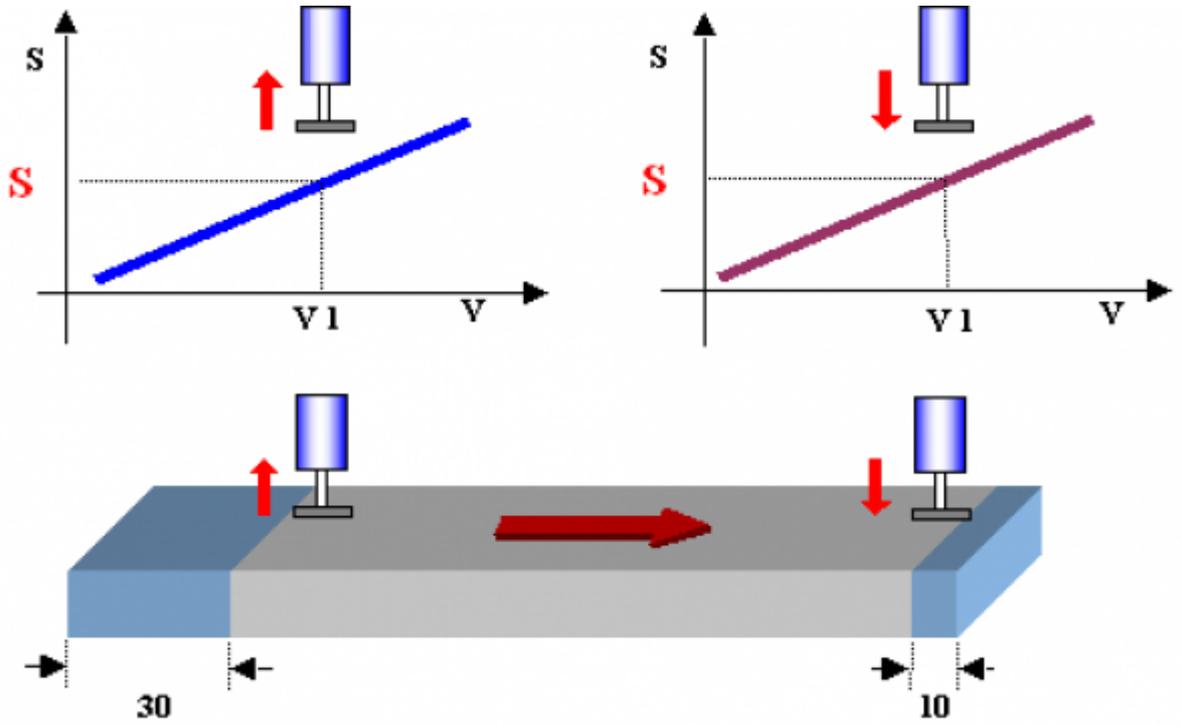

To smooth all the piece: $Downlag = 10$, $Risesdv = -30$




For exit from the **Calibration of dynamic corrections** press the key

1. 6. Diagnostic



To access on the diagnostic, from the **MENU** page, press the **I/O** key

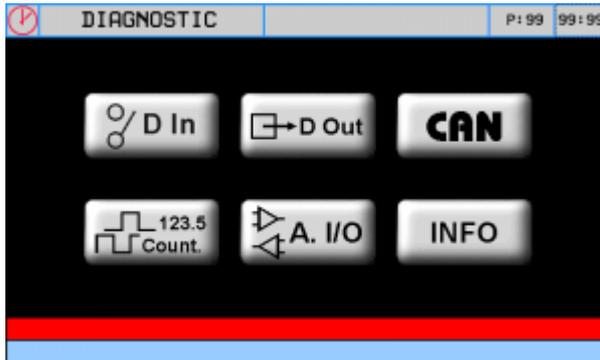

From this page you can access the various diagnostic sections:

	Digital inputs
	Digital outputs
	Counters
	Analog Inputs/Output
	Can informations
	System informations



To return on the **MENU**' page, press the **F7** key

1. 6.1 Digital inputs



To access the diagnostics page of the **Digital Inputs**, press the **D Inp** key




To return on the **DIAGNOSTIC** menu, press the **F7** key

6.2 Digital outputs



To access the diagnostics page of the **Digital Outputs** page, press the **D Out** page

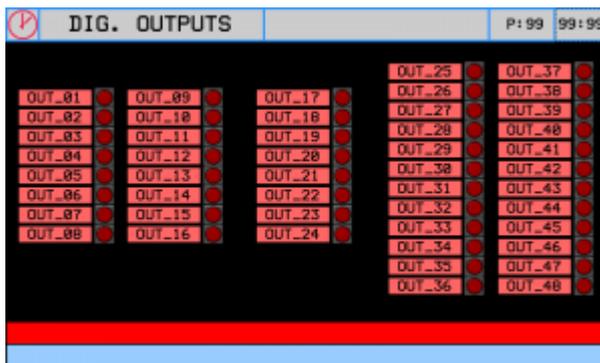


To return on the **DIAGNOSTIC** menu, press the **F7** key

6.3 Conteggi



Per accedere alla pagina di diagnostica dei **Conteggi**, premere il tasto

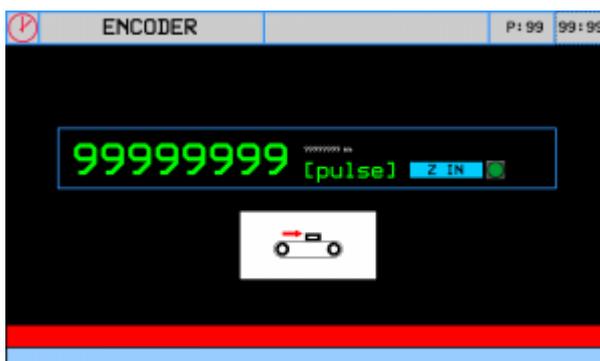




Per tornare al menù di **DIAGNOSTICA** premere il tasto

6.4 Uscite analogiche



Per accedere alla pagina di Diagnostica delle **Uscite analogiche**, premere il tasto

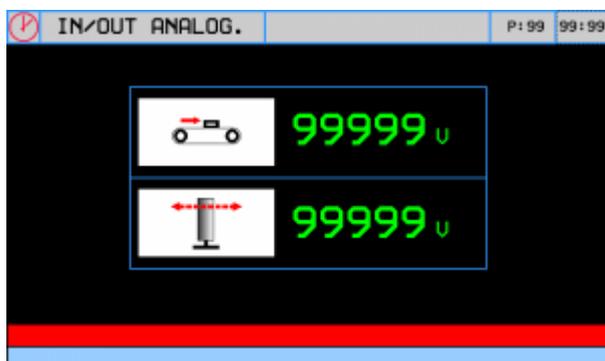

L'uscita analogica è espressa in Volt.




Per tornare al menù di **DIAGNOSTICA** premere il tasto

6.5 Informazioni connessione CAN



Per accedere alla pagina di diagnostica della **Connessione CanOpen**, premere il tasto

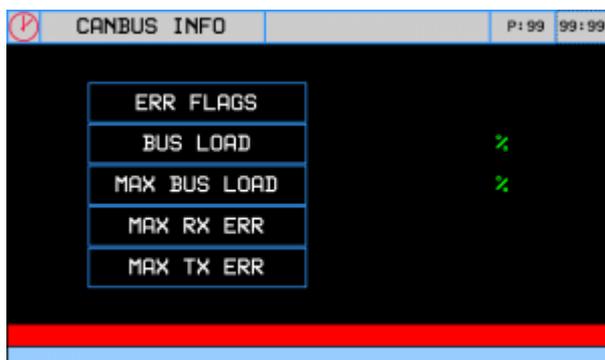


Per tornare al menù di **DIAGNOSTICA** premere il tasto

1. 6.6 Informazioni di sistema



Per accedere alla pagina di diagnostica delle “**Informazioni del sistema**”, premere il tasto

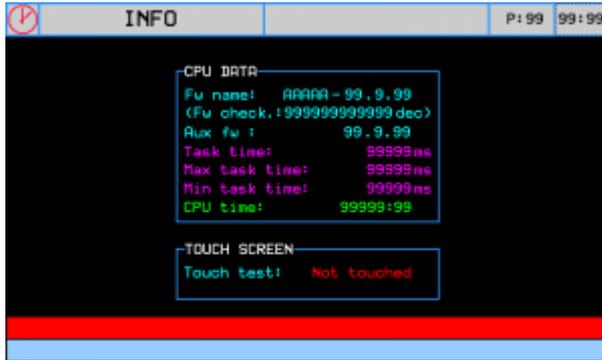

Fw name	firmware e checksum
Aux fw	firmware del modulo I/O (non utilizzato in questa applicazione)
Task time	tempo ciclo CPU : Minimo, Medio, Massimo
CPU time	tempo CPU nello stato di Run (hh:mm)
Touch screen	Test touch



Per tornare al menù di **DIAGNOSTICA** premere il tasto

1. 7. Messaggi di warning

Messaggio	Descrizione
Troppi pezzi in macchina	In macchina ci sono più di 30 pezzi
Attesa attivazione ausiliari...	Attesa abilitazione ausiliari (con <i>MP-08</i> abilitato)(I4 = ON)
Posizionamento quota cambio abrasivo...	Il ponte viene comandato nella posizione di cambio abrasivo
Ausiliari disabilitati	Ausiliari disabilitati (I4 = OFF)
Attenzione!!! Motori spenti.	Tentativo di Start nastro con motori spenti

1. 8. Allarmi



Per accedere, dalla pagina di **MENU PRINCIPALE** premere il tasto

Idx	date	hour	num	par1	par2
1->	99/99/9999	99:99	999	99999	99999
2->	99/99/9999	99:99	999	99999	99999
3->	99/99/9999	99:99	999	99999	99999

ATTIVI 99



Premere il pulsante per cancellare l'allarme

Messaggio	Causa	Ingresso
Emergenza premuta	Controllare la linea dell'emergenza	I01
Fault Inverter	Controllare inverter	I12
Fault encoder belt	Controllare encoder nastro trasportatore (Attivo solo con <i>MP-03</i> > 2).	
Protezioni termiche	Controllare le protezioni termiche	I06
Carter	Controllare le protezioni perimetrali	I07
Mancanza aria	Controllare il pressostato	I08



Il messaggio "**Fault encoder belt**" viene generato automaticamente, se entro 5 secondi non è stato compiuto uno spazio superiore a 2 unità di misura in altre parole, il messaggio viene generato se lo strumento rileva una velocità inferiore a 60mm al minuto

8.1 Storico allarmi



Per accedere, dalla pagina di **ALLARMI** premere il tasto

Idx	date	hour	num	par1	par2
1->	99/99/9999	99:99	999	99999	99999
2->	99/99/9999	99:99	999	99999	99999
3->	99/99/9999	99:99	999	99999	99999

99/99



Dopo aver **rimosso le cause** che provocano l'allarme, premere (x 3 sec.) il tasto per cancellare



Massimo 60 allarmi.

1. 9. Varie

9.1 Sequenza Avviamento Motori

La sequenza avviamento motori può avvenire in 3 modalità (parametro **MP-05**)

1 = abilitata su J1-P20. **N.B.** Le uscite di avviamento motori sono in comune con quelle di discesa testa.

2 = abilitata su modulo RMC.

3 = abilitata su modulo RMC. **N.B.** Si attiva in automatico all'ingresso del pezzo in macchina.


9.1.1 Avviamento Motori su J1-P20F (MP-05=1)

La sequenza di avviamento motori utilizza le stesse uscite utilizzate per la discesa teste.

L'ingresso I2 stabilisce se le uscite vengono utilizzate per il comando discesa delle Teste oppure se vengono utilizzate per l'avviamento dei motori.

L'ingresso I3 fa partire la sequenza di avviamento motori.

Qui di seguito il diagramma di funzionamento della sequenza avvio motori con il parametro **MP-05=1**.

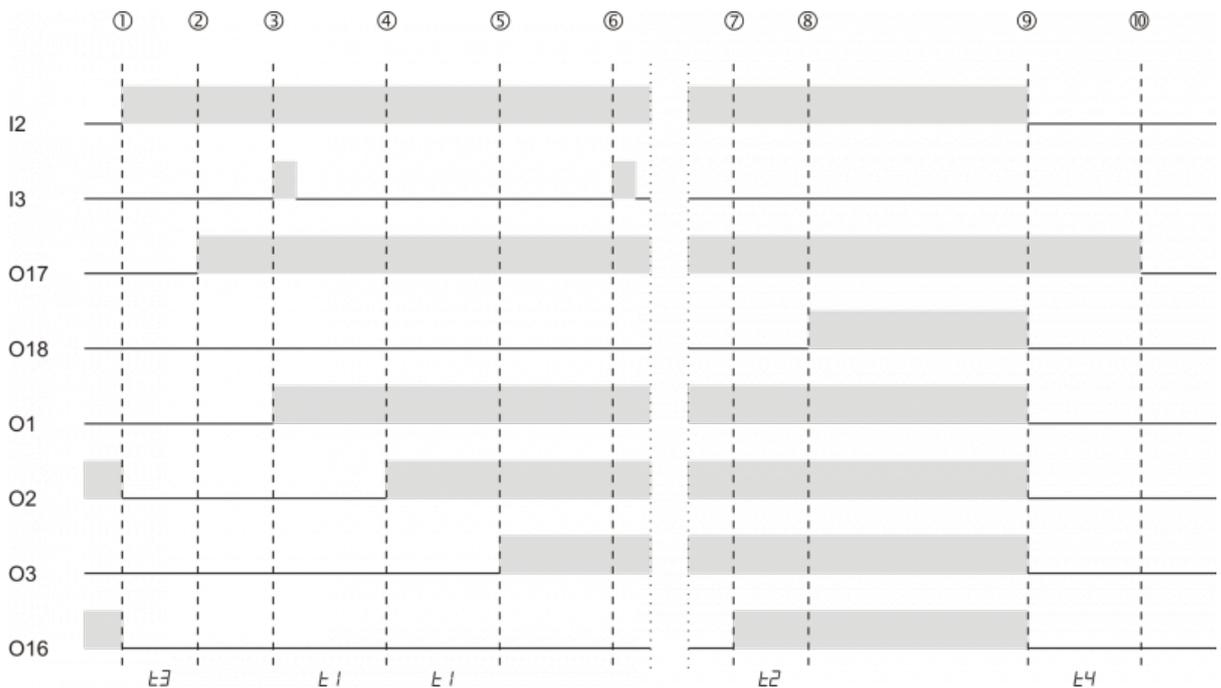

Legenda

- **I2** = Attivazione teste (OFF) / Avviamento motori (ON)
 - **I3** = Start motori
 - **O17** = Attivazione teste (OFF) / Avviamento motori (ON)
 - **O1+O16** = Comando teste 1+16
 - **O18** = Fine avviamento
1. Si attiva l'ingresso **I2** e quindi lo strumento cambia il modo di funzionamento da attivazione teste ad avviamento motori. Tutte le uscite relative alle teste (**O1+O16**) vengono disattivate.
 2. Dopo il tempo $t3$ (tempo passaggio funzionamento discesa teste / avviamento motori) lo strumento attiva l'uscita **O17** e abilita il modo di funzionamento avviamento motori.
 3. All'attivazione dell'ingresso **I3** si ha l'inizio della procedura di partenza in cascata dei motori e si attiva l'uscita relativa alla prima testa abilitata in set-up in ordine crescente.
 4. Trascorso il tempo $t1$ (tempo intervallo start motori) si ha l'attivazione dell'uscita relativa alla successiva testa abilitata in set-up.
 5. Trascorso il tempo $t1$ (tempo intervallo start motori) si ha l'attivazione dell'uscita relativa alla successiva testa abilitata in set-up.
 6. Nel caso in cui venga attivato nuovamente un comando di start motori (**I3**) questo non viene elaborato. Un nuovo comando di start sarà elaborato solo nel caso in cui lo strumento passi prima in modo di funzionamento attivazione teste (**O17** = OFF) e poi ritorni in modo di funzionamento avviamento motori (**O17** = ON).
 7. Si attiva l'uscita dell'ultima testa abilitata e ha termine la procedura di start motori.
 8. Si attiva l'uscita **O18** dopo il tempo $t2$ (Tempo che intercorre tra l'avviamento dell'ultimo motore e l'attivazione dell'uscita di fine avviamento motori **O18**).
 9. Si disattiva l'ingresso **I2** e lo strumento cambia il modo di funzionamento da avviamento motori ad attivazione teste. Tutte le uscite relative alle teste (**O1+O16**) e l'uscita **O18** vengono disattivate.
 10. Trascorso il tempo $t4$ (tempo passaggio avviamento-attivazione) lo strumento disattiva l'uscita **O17** ed abilita il modo di funzionamento attivazione teste.


9.1.2 Avviamento Motori su Modulo RMC (MP-05=2)

La sequenza di avviamento motori utilizza le uscite utilizzate nel modulo RMC.

L'Ingresso I2 non ha nessun funzionamento.

L'ingresso I3 fa partire la sequenza di avviamento motori.

Qui di seguito il diagramma di funzionamento della sequenza avvio motori con il parametro **MP-05=2**.

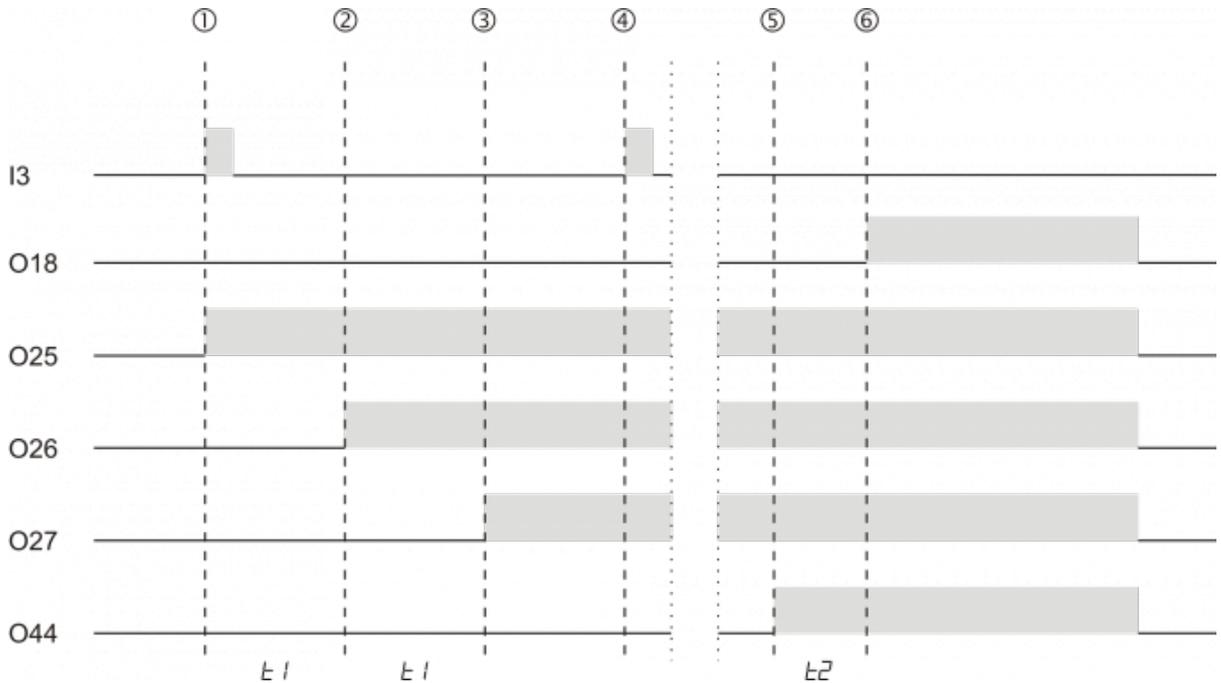

Legenda

- **I3** = Start motori
- **O25+O44** = Comando teste 1+20
- **O18** = Fine avviamento

1. All'attivazione dell'ingresso **I3** si ha l'inizio della procedura di partenza in cascata dei motori e si attiva l'uscita relativa alla prima testa abilitata in set-up in ordine crescente.
2. Trascorso il tempo t_1 (tempo intervallo start motori) si ha l'attivazione dell'uscita relativa alla successiva testa abilitata in set-up.
3. Trascorso il tempo t_1 (tempo intervallo start motori) si ha l'attivazione dell'uscita relativa alla successiva testa abilitata in set-up.
4. Nel caso in cui venga attivato nuovamente un comando di start motori (**I3**) questo non viene elaborato.
5. Si attiva l'uscita dell'ultima testa abilitata e ha termine la procedura di start motori.
6. Si attiva l'uscita **O18** dopo il tempo t_2 (Tempo che intercorre tra l'avviamento dell'ultimo motore e l'attivazione dell'uscita di fine avviamento motori **O18**).

9.1.3 Avviamento Motori su Modulo RMC (MP-05=3)


La sequenza di avviamento motori utilizza le uscite utilizzate nel modulo RMC.

L'Ingresso I2 non ha nessun funzionamento.

L'ingresso I3 non ha nessun funzionamento.

La sequenza di "avviamento motori" viene avviata automaticamente non appena "entra" il primo pezzo in macchina. N.B. Quando l'ultimo pezzo lavorato "esce" dalla macchina, le uscite avviamento motori si disattivano.

Qui di seguito il diagramma di funzionamento della sequenza avvio motori con il parametro **MP-05=3**.

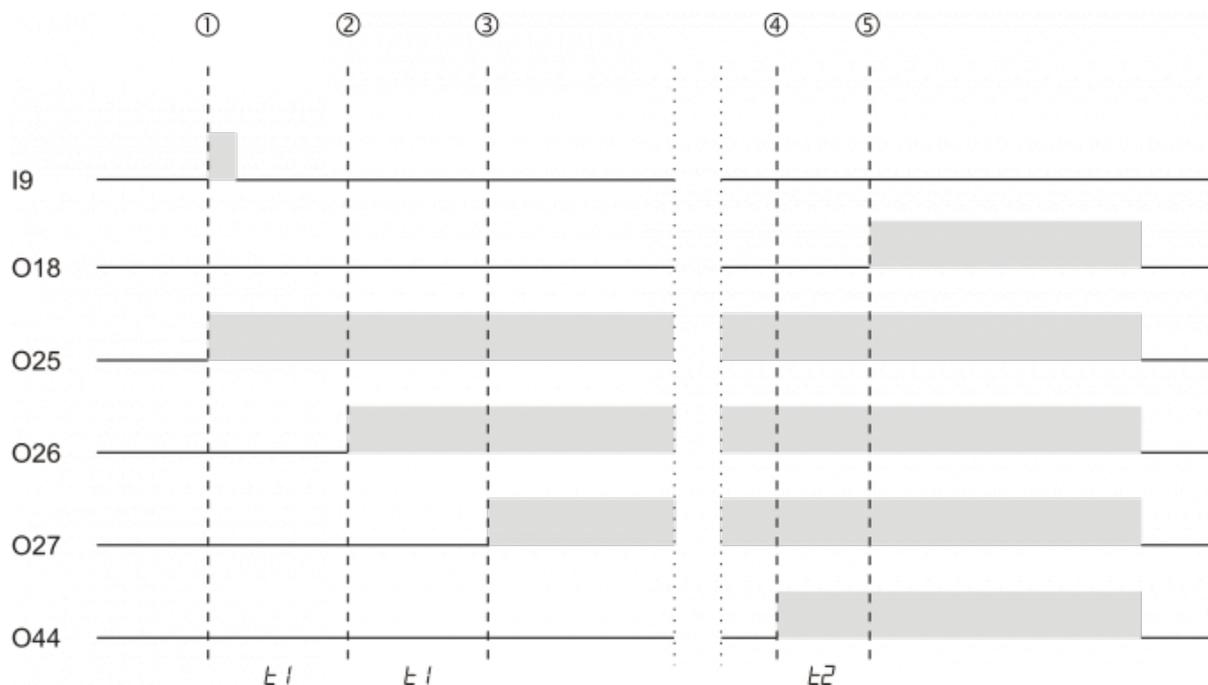**Legenda**

- **I9** = Acquisizione pezzo
 - **O25÷O44** = Comando teste 1÷20
 - **O18** = Fine avviamento
1. All'attivazione dell'ingresso **I9** si ha l'inizio della procedura di partenza in cascata dei motori e si attiva l'uscita relativa alla prima testa abilitata in set-up in ordine crescente.
 2. Trascorso il tempo t_1 (tempo intervallo start motori) si ha l'attivazione dell'uscita relativa alla successiva testa abilitata in set-up.
 3. Trascorso il tempo t_1 (tempo intervallo start motori) si ha l'attivazione dell'uscita relativa alla successiva testa abilitata in set-up.
 4. Si attiva l'uscita dell'ultima testa abilitata e ha termine la procedura di start motori.
 5. Si attiva l'uscita **O18** dopo il tempo t_2 (Tempo che intercorre tra l'avviamento dell'ultimo motore e l'attivazione dell'uscita di fine avviamento motori **O18**).

1. 10. Assistance

For supplying you fast service, at the lowest cost, we need your support.

	
<p>Follow all instructions provided in the MIMAT manual</p>	<p>If the problem remains, fill out the "Request Form for assistance" on the page Contacts at www.qem.it site. Our technicians will get elements essential for the understanding of your problem.</p>

Repair

To provide you with an efficient service, please read and adhere to the instructions given [here](#)

Shipping

It is recommended to pack the instrument with materials that are able to cushion any falls.

		
<p>Use the original package: it must protect the instrument during transport.</p>	<p>Attach:</p> <ol style="list-style-type: none"> 1. A description of the anomaly; 2. A part of the electric scheme where the equipment is inserted 3. The planning of the equipment (set up, quotas of job, parameters...). 4. Request a quote for repair; if not required, the cost will be calculated in the final balance. 	<p>A full description of the problem, will help identify and resolve your problems fast. A careful packaging will avoid further inconveniences.</p>

Documento generato automaticamente da **Qem Wiki** - <https://wiki.qem.it/>

Il contenuto wiki è costantemente aggiornato dal team di sviluppo, è quindi possibile che la versione online contenga informazioni più recenti di questo documento.