


Sommario

1. Connection examples	3
<i>CANbus</i>	3
<i>Digital inputs</i>	4
<i>PNP / Push Pull count inputs</i>	5
<i>Voltmetric and amperometric analog inputs</i>	6
<i>Voltmetric and potentiometric analog inputs</i>	7
<i>Protected digital outputs</i>	8
<i>Analog outputs</i>	9

1. Connection examples

CANbus

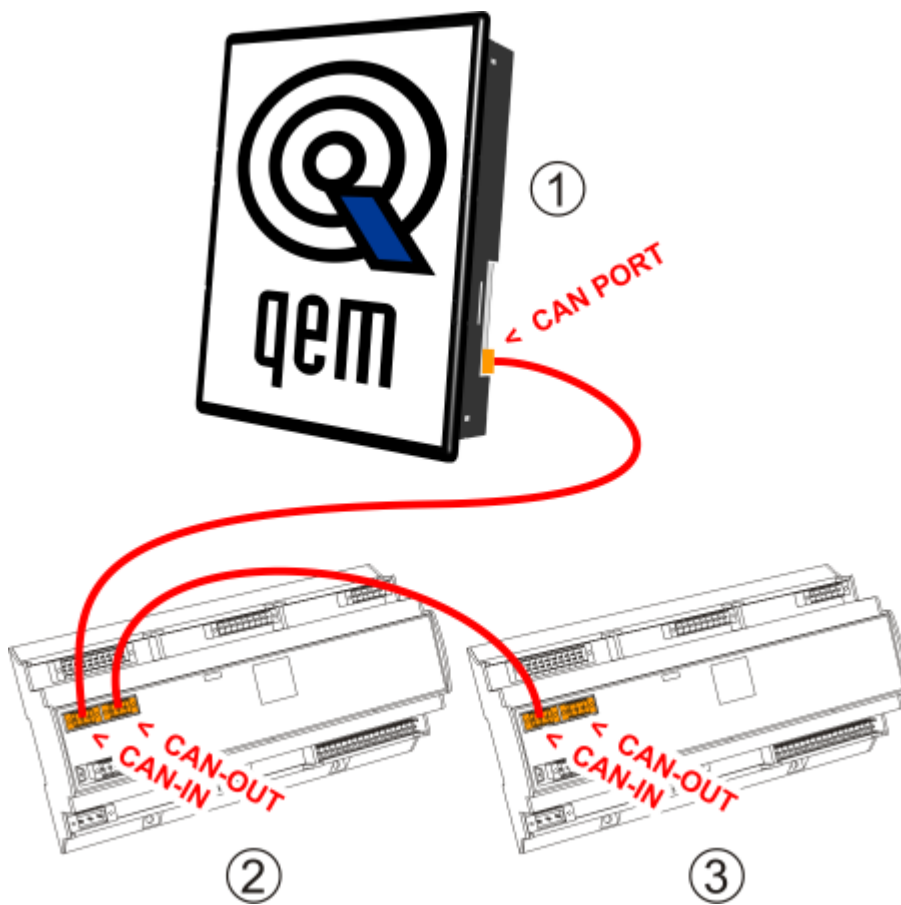



- On the first (1) and on the last (3) device of the chain, the termination resistances must be inserted.
- The cable shoes must be connected to ground by the fastons provided on the metal body.




- To activate the internal termination resistance see paragraph [Setup of CAN1 and CAN2 PORT Termination resistances](#)

Digital inputs

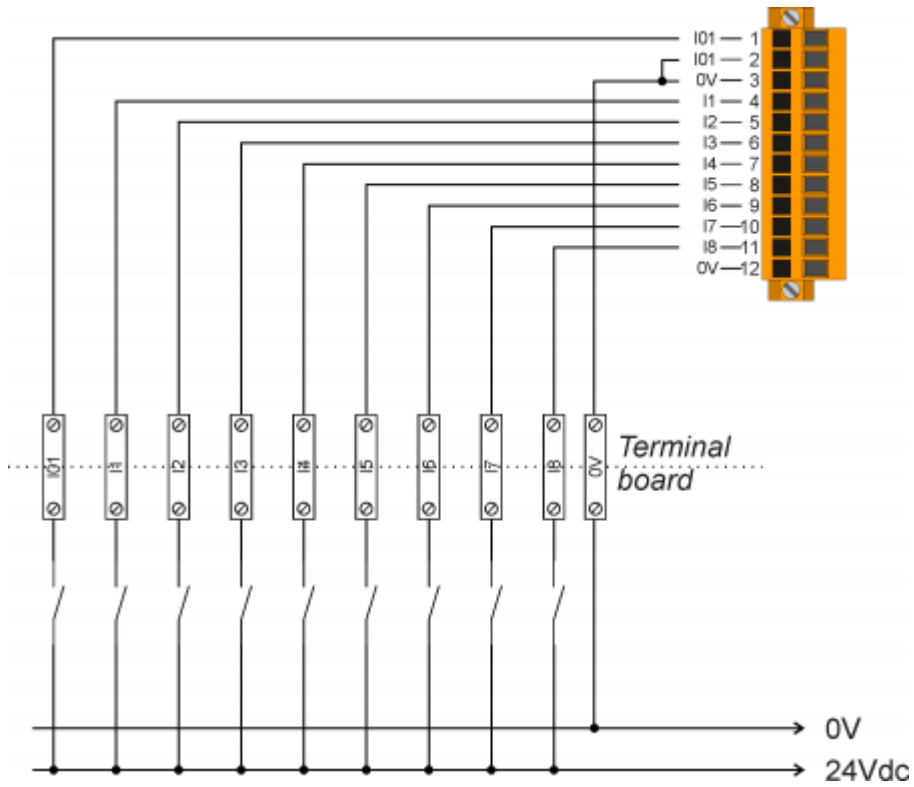


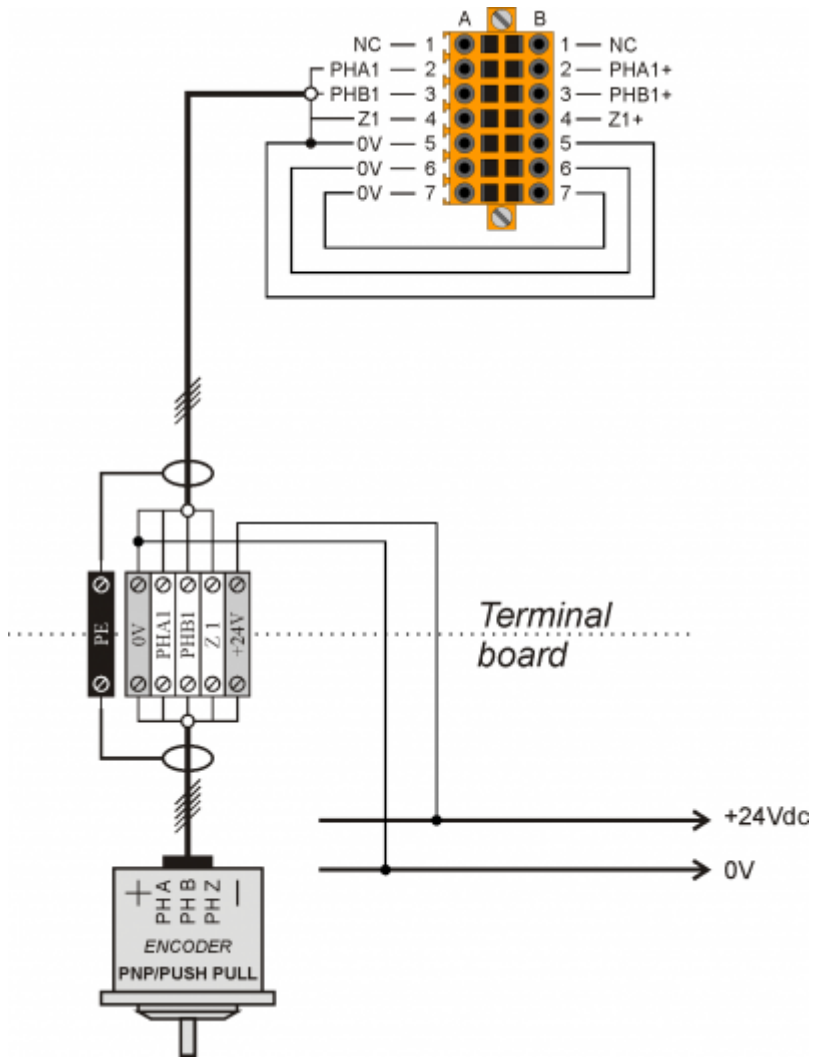PNP / Push Pull count inputs


Voltmetric and amperometric analog inputs

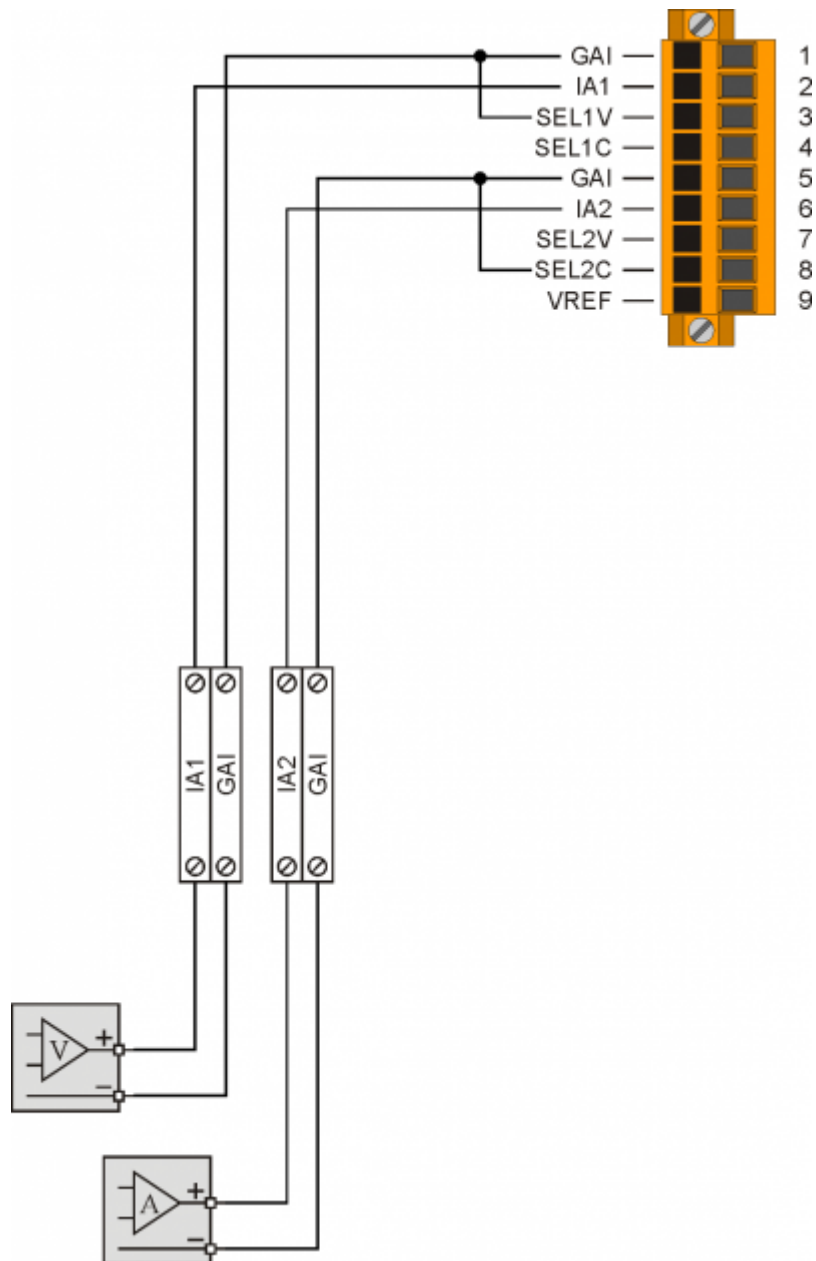


Voltmetric and potentiometric analog inputs

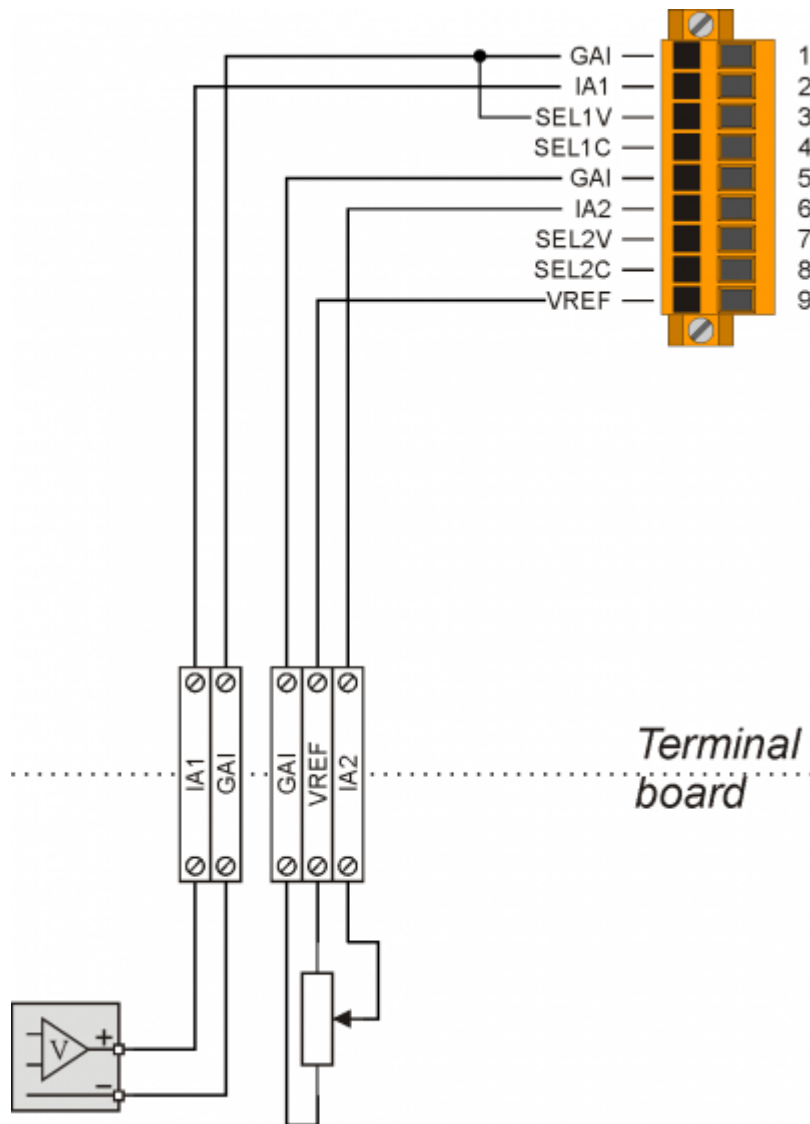

Protected digital outputs

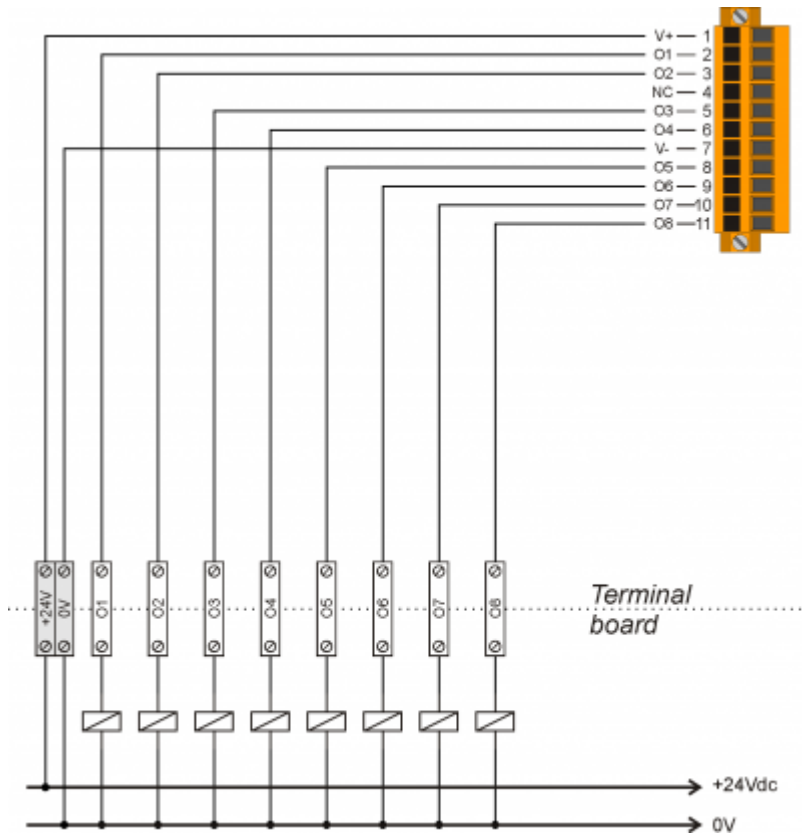

Analog outputs

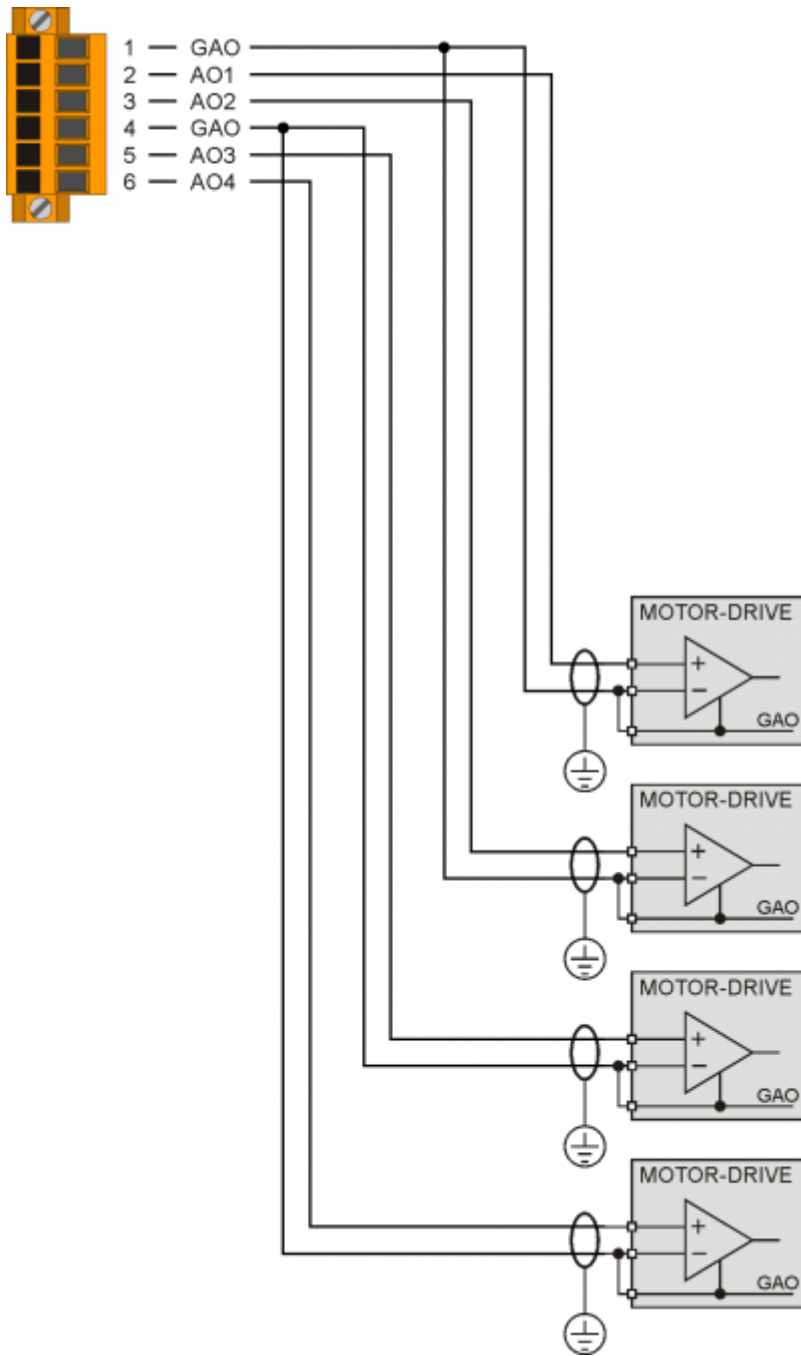

Documento generato automaticamente da **Qem Wiki** - <https://wiki.qem.it/>

Il contenuto wiki è costantemente aggiornato dal team di sviluppo, è quindi possibile che la versione online contenga informazioni più recenti di questo documento.