

## Sommario


|                                                                           |   |
|---------------------------------------------------------------------------|---|
| <b>AN011 - R401 - Removal/installation procedure from DIN guide</b> ..... | 3 |
| <i><b>Remove</b></i> .....                                                | 3 |
| <i><b>Installation</b></i> .....                                          | 6 |



## AN011 - R401 - Removal/installation procedure from DIN guide


### Remove

Picture 1

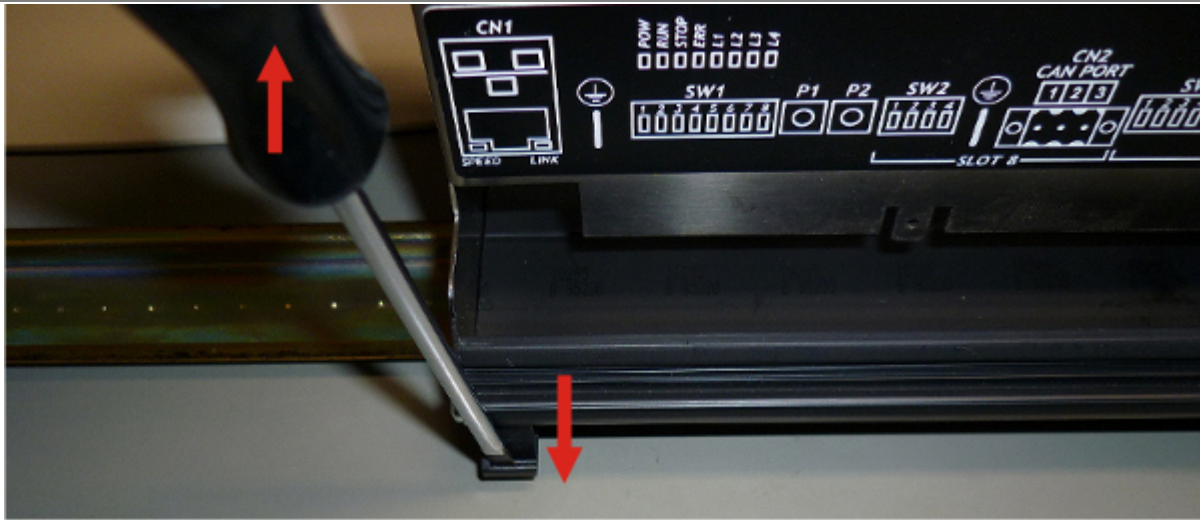



Make a slight upward thrust on the instrument, lever with a screwdriver on the left hook tongue

Picture 2

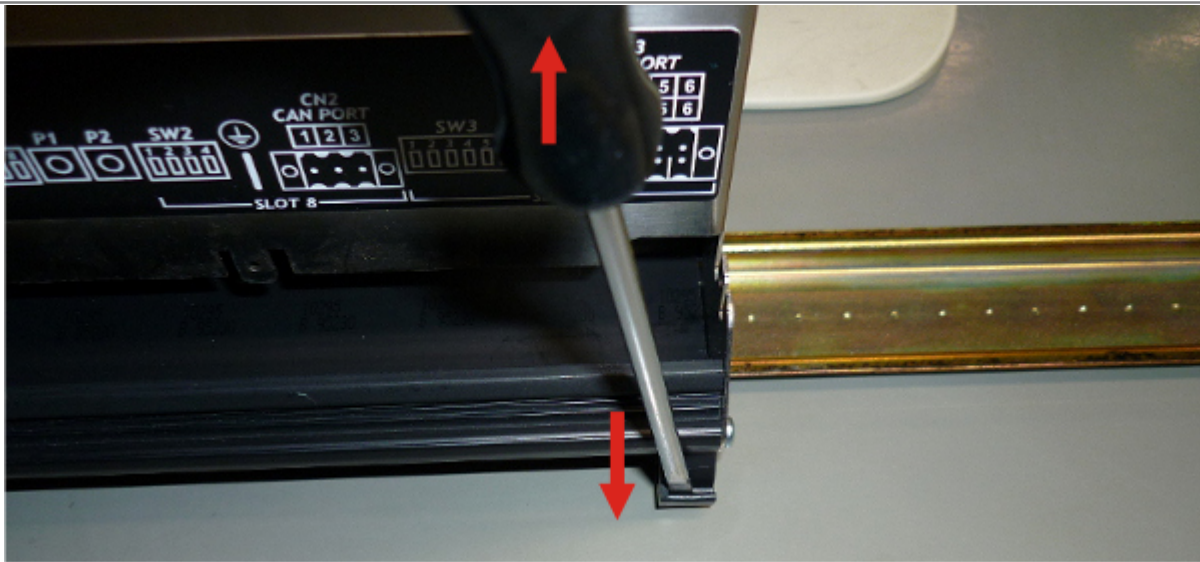


Keeping the thrust upward on the instrument, Lever with a screwdriver on the tongue of the right hook, until the instrument is completely unlocked

Picture 3

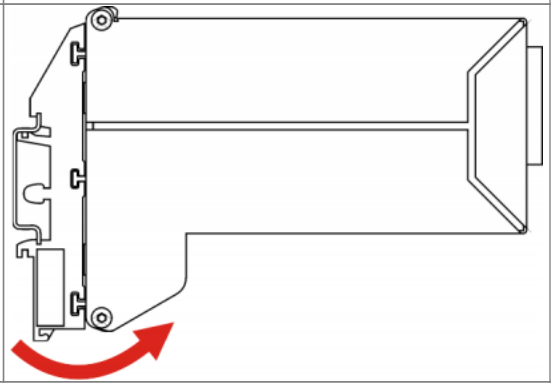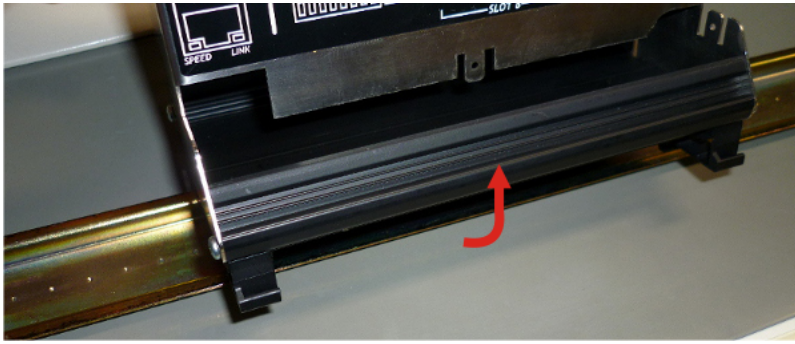


Rotate and lift upwards.....

Picture 4

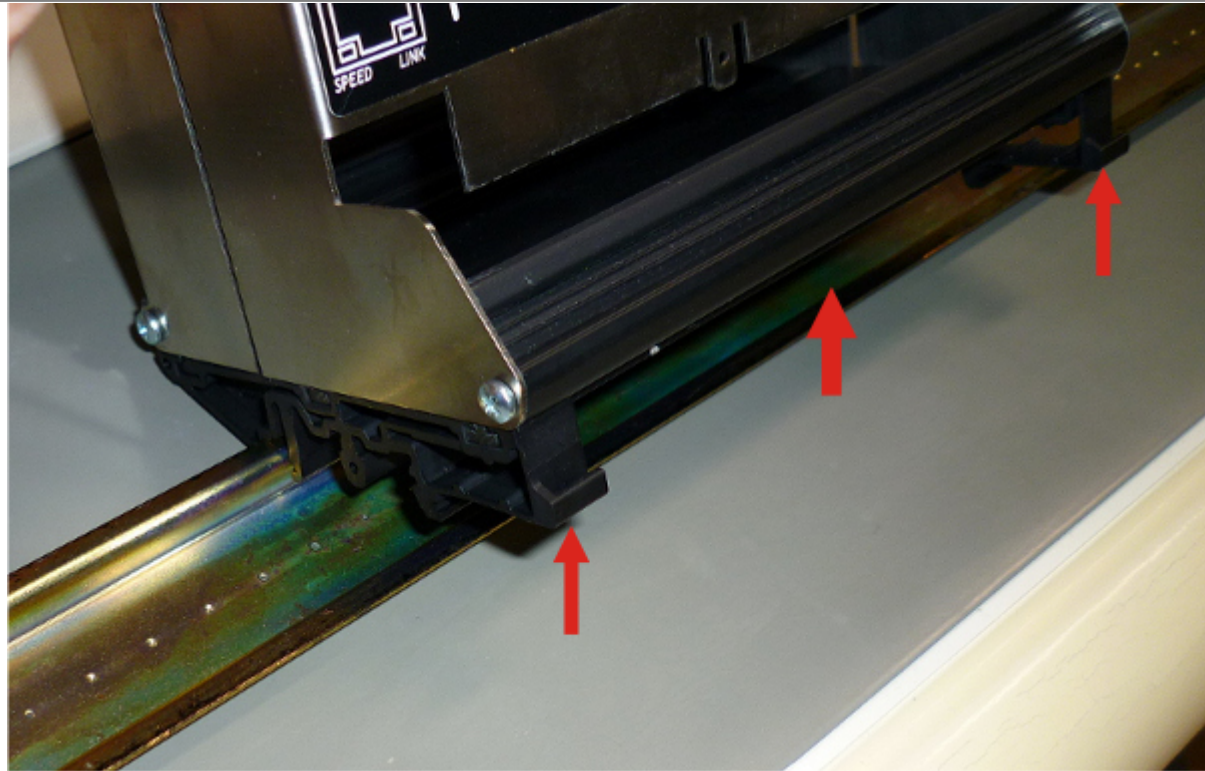

.....until the complete release from the DIN rail


Picture 5

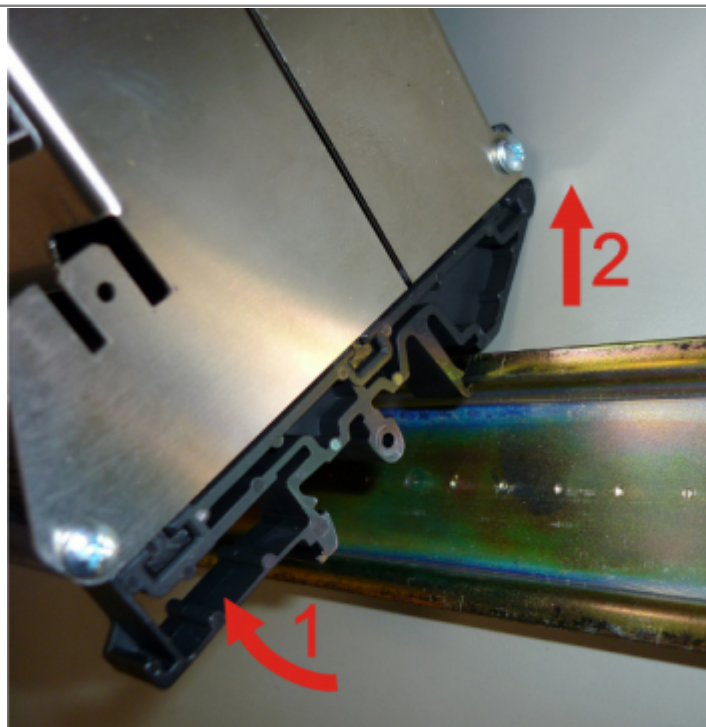

Remove the instrument from the DIN rail (1), lifting in vertical direction (2)


## Installation

Picture 6

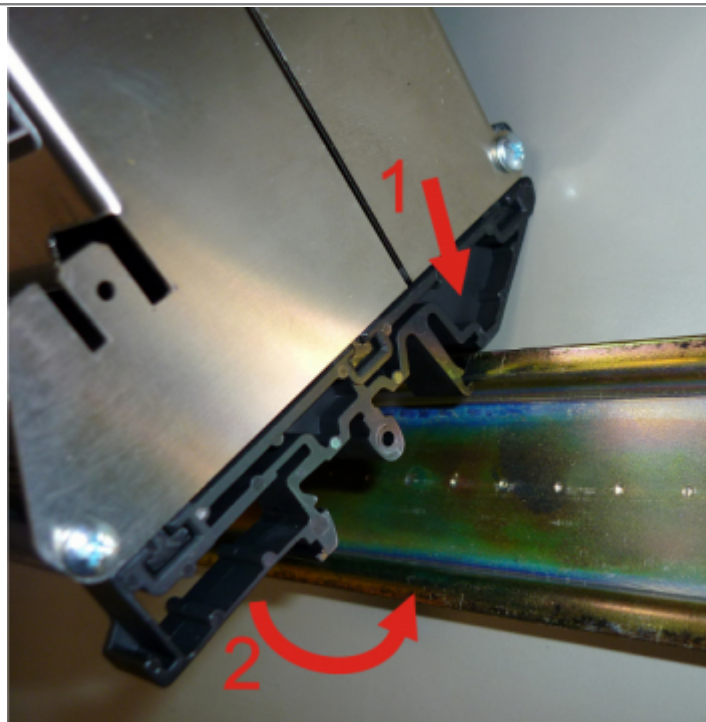

Attach the instrument to the DIN rail (1), and rotate it to the DIN guide (2)...

Picture 7

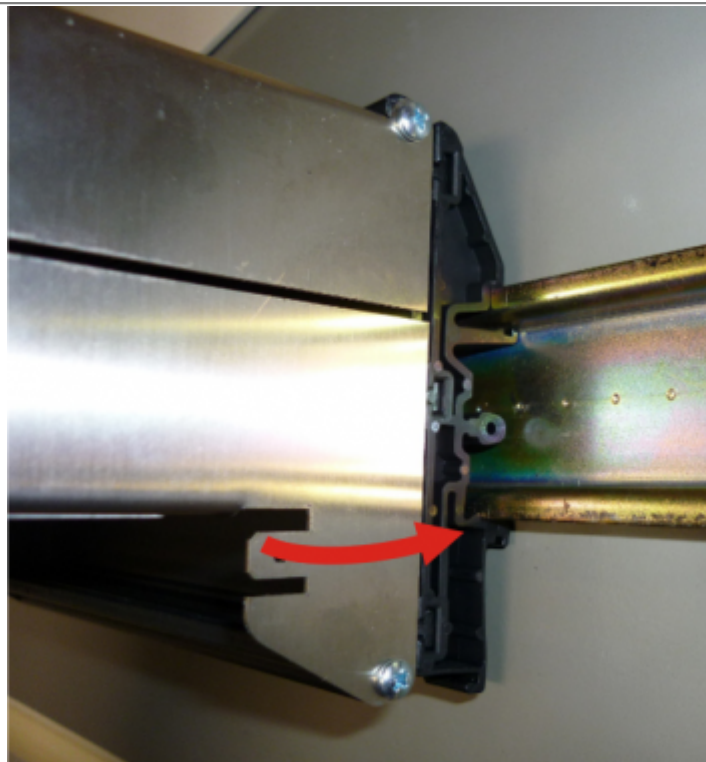

...Press until the hooks are clicked

Documento generato automaticamente da **Qem Wiki** - <https://wiki.qem.it/>

Il contenuto wiki è costantemente aggiornato dal team di sviluppo, è quindi possibile che la versione online contenga informazioni più recenti di questo documento.