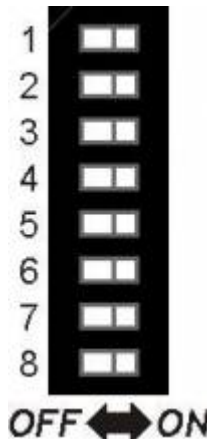


Sommario

SW1		Dip	DIP settings				Function
	1	OFF	OFF	ON	ON	Select PROG PORT transmission speed	
	2	OFF	ON	OFF	ON		
		Baud-rate 38400	Baud-rate 115200	Baud-rate 19200	Baud-rate 57600		
	3	OFF	OFF	ON	ON	Select USER PORT transmission speed	
	4	OFF	ON	OFF	ON		
		Baud-rate 38400	Baud-rate 115200	Baud-rate 19200	Baud-rate 57600		
	5	CANbus baud-rate selector. See paragraph CANbus baud-rate selector					
	6	OFF			ON		Select PROG PORT functioning mode
		PROG PORT can also be used by SERCOM and MODBUS devices		PROG PORT cannot be used by SERCOM and MODBUS devices			
	7	CANbus baud-rate selector. See paragraph CANbus baud-rate selector					
8	OFF			ON		Select the USER PORT as PROG PORT ¹⁾	
	PROG PORT normal		PROG PORT on USER PORT connector				

¹⁾ It is possible to use the USER PORT connector as PROG PORT with RS232 electric standard, doing this the mini-USB connector of the PROG PORT is disconnected (Setting USER PORT electric standard).
For this function mode also set dip 6 of SW2 to OFF.

Documento generato automaticamente da **Qem Wiki** - <https://wiki.qem.it/>

Il contenuto wiki è costantemente aggiornato dal team di sviluppo, è quindi possibile che la versione online contenga informazioni più recenti di questo documento.