


Sommario


AN013 - Battery allarm reset procedure for Q1-CPU-B (modular Qmove).	3
---	----------

AN013 - Battery alarm reset procedure for Q1-CPU-B (modular Qmove).


- Obtain cable built as shown:

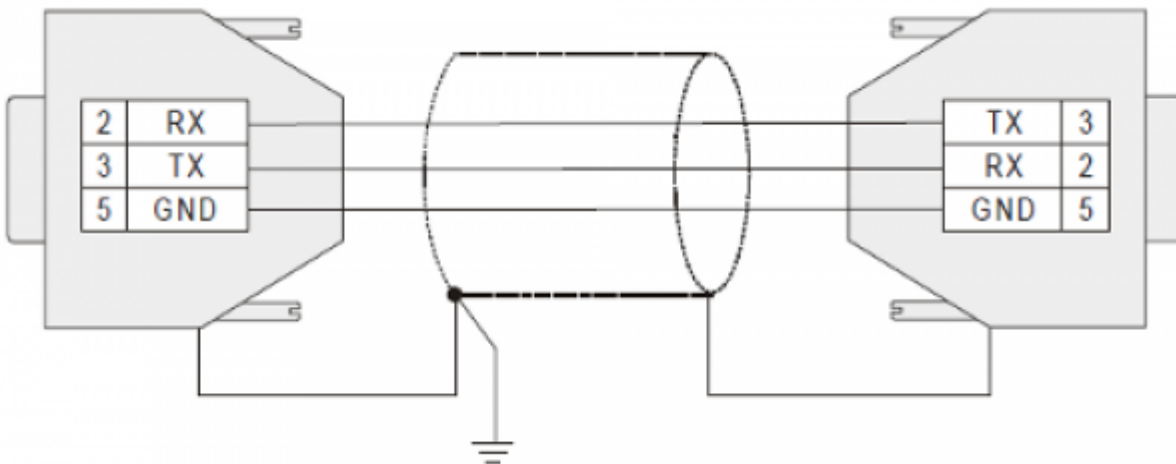


- The battery should be substitute only with **power on instrument**.
- To install the program "[Teraterm Pro](#)" after extraction and follow the installation instruction.
- Open the "Teraterm Pro".
- When you open the following screen appears. To set the COM port.

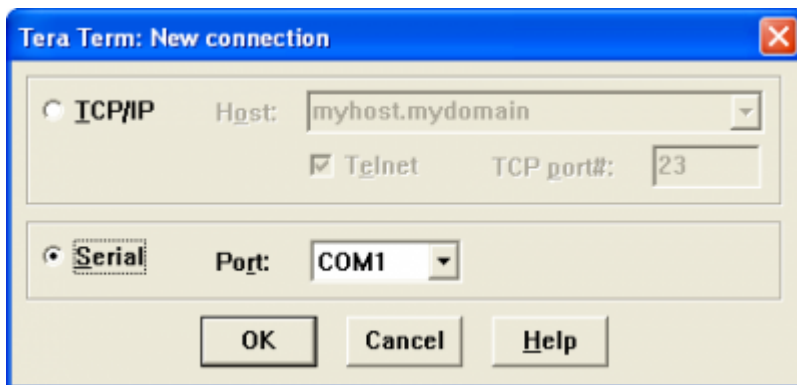

- Click on "Setup" menù and than select the "Serial port". To set the speed at **19200**.
- Put the CPU in boot state, push "RESET" system button and immediately the "BOOT" button.
- If the procedure is correct "BOOT" led turn ON.
- Open the "Control" menù and select "Macro". From the window of the explorer, to select the file "[ver.ttl](#)" after extraction.

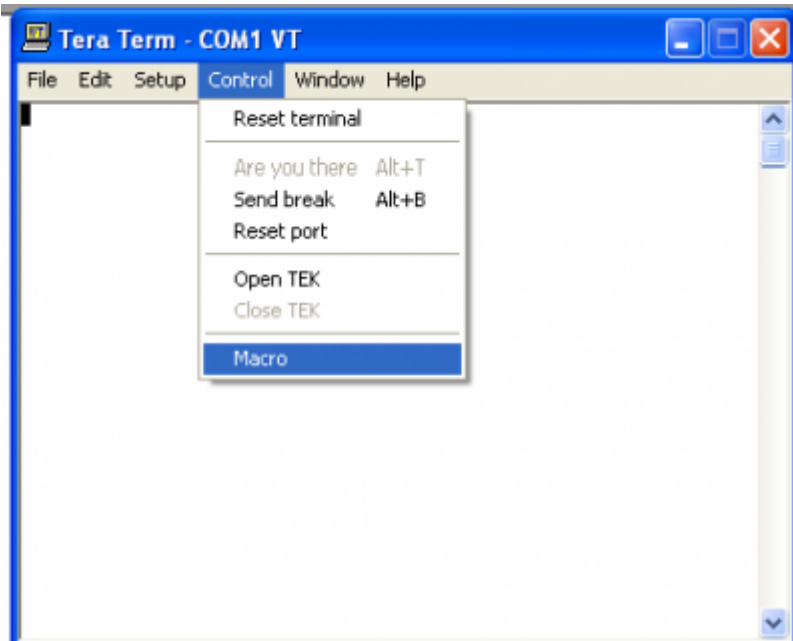

- The following screen appears. To select “Yes”.

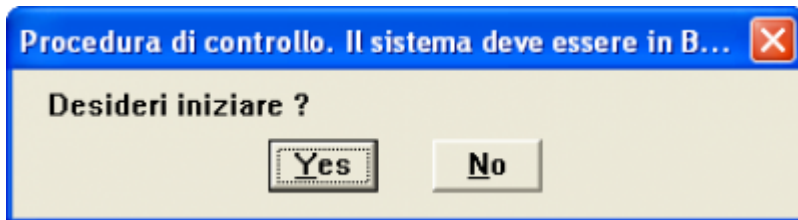

- Set the “data” and then follow the instructions.
- The “BATT” led turn OFF.

Documento generato automaticamente da **Qem Wiki** - <https://wiki.qem.it/>

Il contenuto wiki è costantemente aggiornato dal team di sviluppo, è quindi possibile che la versione online contenga informazioni più recenti di questo documento.