

Sommario

Connector

@cnn@	Terminal	Symbol	Description			Address
			Potenzimetri / 0-10V / 0-20mA	Thermocouple	PT100	
	1	AI2_C	-	TC 2 +	C	@slot@.AI02
	2	AI2_B	-	TC 2 -	B	
	3	AI2_A	Analog input 2	-	A ¹⁾	
	4	AI1_C	-	TC 1 +	C	@slot@.AI01
	5	AI1_B	-	TC 1 -	B	
	6	AI1_A	Analog input 1	-	A ²⁾	
	7	VREF	Reference voltage ³⁾	-	-	
	8	GAI	Common	-	-	

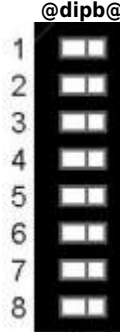
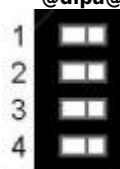


^{1), 2)} A and B cables are connected to the same head of the PT100 wire and have the same colors.

In the case of 2-wire PT100 make a jumper between A and B.

³⁾ For potentiometers

Analog inputs setting

	Num. Dip	Analog input 1					Analog input 2				
		PT100	Thermocouple	Pot.	0-10V	0-20mA	PT100	Thermocouple	Pot.	0-10V	0-20mA
 @dipb@	1	ON	X	OFF	OFF	OFF	X	X	X	X	X
	2	OFF	X	ON	ON	ON	X	X	X	X	X
	3	X	X	X	X	X	ON	X	OFF	OFF	OFF
	4	X	X	X	X	X	OFF	X	ON	ON	ON
	5	ON	ON	OFF	OFF	OFF	X	X	X	X	X
	6	OFF	OFF	ON	ON	ON	X	X	X	X	X
	7	OFF	ON	X	X	X	X	X	X	X	X
	8	X	X	X	X	X	OFF	ON	X	X	X
 @dipa@	1	X	X	X	X	X	X	X	OFF	OFF	ON
	2	X	X	X	X	X	X	X	OFF	ON	OFF
	3	X	X	OFF	OFF	ON	X	X	X	X	X
	4	X	X	OFF	ON	OFF	X	X	X	X	X

X = irrelevant setting

Pot. = potentiometric type input

Documento generato automaticamente da **Qem Wiki** - <https://wiki.qem.it/>

Il contenuto wiki è costantemente aggiornato dal team di sviluppo, è quindi possibile che la versione online contenga informazioni più recenti di questo documento.