Sommario

The electrical features are given in section Electrical features.
The connection examples are provided in section Connection examples

.

@cnna@	>Terminal	Simbol	Description		Address	
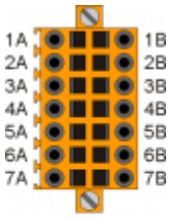	1A		+24V dc output [1]			
	2A	PHA1	Phase A	Counter 1 PNP / Push-Pull[2]	@slot@.INP@ina@	@slot@.CNT@cnta@
	3A	PHB1	Phase B		@slot@.INP@inb@	
	4A	Z1	Z		1.INT@inta@	
	5A	0V	Counter inputs common			
	6A	0V				
	7A	0V				
	1B		+24V dc output[3]			
	2B	PHA1+	+ PHA	Counter 1 Line Driver	@slot@.INP@ina@	@slot@.CNT@cnta@
	3B	PHB1+	+ PHB		@slot@.INP@inb@	
	4B	Z1+	+ Z		1.INT@inta@	
	5B	PHA1-	- PHA			
	6B	PHB1-	- PHB			
	7B	Z1-	- Z			

[1], [3] Can be used to power the encoder. See the Connection examples.
[2] **Configuration type counter PNP/Push-Pull**:
5B terminal : to connect at 5A terminal
6B terminal: to connect at 6A terminal
7B terminal: to connect at 7A terminal

@cnnb@	Terminal	Simbol	Description		Address	
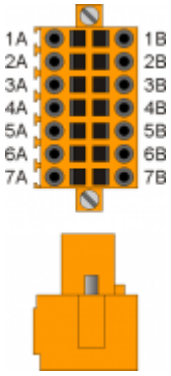	1A		+24V dc output[1]			
	2A	PHA2	Phase A	Conteggio 2 PNP / Push-Pull[2]	@slot@.INP@inc@	@slot@.CNT@cntb@
	3A	PHB2	Phase B		@slot@.INP@ind@	
	4A	Z2	Z		1.INT@intb@	
	5A	0V	Counter inputs common			
	6A	0V				
	7A	0V				
	1B		+24V dc output[3]			
	2B	PHA2+	+ PHA	Counter 2 Line Driver	@slot@.INP@inc@	@slot@.CNT@cntb@
	3B	PHB2+	+ PHB		@slot@.INP@ind@	
	4B	Z2+	+ Z		1.INT@intb@	
	5B	PHA2-	- PHA			
	6B	PHB2-	- PHB			
	7B	Z2-	- Z			

[1], [3] Can be used to power the encoder. See the Connection examples.
[2] **Configuration type counter PNP/Push-Pull**:
5B terminal : to connect at 5A terminal
6B terminal: to connect at 6A terminal
7B terminal: to connect at 7A terminal

Documento generato automaticamente da **Qem Wiki** - https://wiki.qem.it/
Il contenuto wiki è costantemente aggiornato dal team di sviluppo, è quindi possibile che la versione online contenga informazioni più recenti di questo documento.